

JF2 and JN3 MEMS Sensor Application Note

80000NT10074A Rev.2 2012-09-19



APPLICABILITY TABLE

PRODUCT
JF2
JN3



*SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE***Notice**

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A. 2012.



Contents

1.	Introduction	7
1.1.	Scope	7
1.2.	Audience	7
1.3.	Contact Information, Support.....	7
1.4.	Document Organization.....	8
1.5.	Text Conventions	8
1.6.	Related Documents	8
2.	MEMS Overview.....	9
3.	MEMS System Architecture.....	10
4.	Supported MEMS Devices	11
5.	MEMS Static Detection vs Static Navigation (Position Pinning).....	12
6.	MEMS Sensor OSP Messages.....	13
6.1.	Accelerometer	13
6.1.1.	Configuration	13
6.1.2.	Enable Message.....	15
7.	Reference Design.....	16
7.1.	Accelerometer	16
7.1.1.	JF2 Connections	16
7.1.2.	JN3 Rev L Connections.....	16
7.2.	Magnetometer	17
7.2.1.	JF2 Connections	17
7.2.2.	JN3 Rev L Connections.....	17
7.3.	Optional Pressure Sensor	18
7.3.1.	JF2 Connections	18
7.3.2.	JN3 Rev L Connections.....	18
7.4.	Optional Gyroscope.....	19
7.4.1.	JF2 Connections	19
7.4.2.	JN3 Rev L Connections.....	19



8.	Document History	20
----	------------------------	----



1. Introduction

1.1. Scope

Scope of this document is to give an overview of

- The MEMS sensor related features within the SiRFStarIV based JF2 and JN3
- How these features operate in different environments

1.2. Audience

This document is intended for Designers implementing MEMS into their SiRFStarIV based GPS system.

1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-EMEA@telit.com
TS-NORTHAMERICA@telit.com
TS-LATINAMERICA@telit.com
TS-APAC@telit.com

Alternatively, use:

<http://www.telit.com/en/products/technical-support-center/contact.php>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.



1.4. Document Organization

This document contains the following chapters :

[“Chapter 1: “Introduction”](#) provides a scope for this document, target audience, contact and support information, and text conventions.

[“Chapter 2: “MEMS Overview”](#) gives an overview of the MEMS in Jupiter series.

[“Chapter 3: “MEMS System Architecture”](#) describes in details the characteristics of MEMS in Jupiter JF2/JN3 series.

[“Chapter 4: “Supported MEMS devices”](#) details the supported/suggested MEMS for Jupiter JF2/JN3 series integration.

[“Chapter 5: “MEMS Static Detection vs Static Navigation \(position Pinning\)”](#) details the difference between Static NAV vs Static Detection..

[“Chapter 6: “MEMS Senson OSP Messages”](#) provides details about OSP messages dedicated to MEMS feature..

[“Chapter 7: “Reference Design”](#) provides reference design for MEMS integration with JN3/JF2.

1.5. Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.6. Related Documents

- Telit Jupiter JF2 Product Description
- Telit Jupiter JN3 Product Description



2. MEMS Overview

The JF2 and the JN3 modules have fully integrated GPS navigation engines that perform:

- signal acquisition
- tracking
- measurement
- navigation computation

In addition to autonomous GPS functionality, ephemeris assisted GPS, and low-power features, the JF2 and JN3 supports interfaces to other sensors. *Micro-Electro-Mechanical Systems* devices, or MEMS, include accelerometers, gyroscopes, and magnetometers that provide additional capabilities and supplement the GPS data.



3. MEMS System Architecture

The MEMS system architecture for the SiRFStarIV platform uses the concept of a MEMS Gateway. This means that the MEMS sensors are connected to the JF2 or JN3 via a high-speed I2C serial peripheral interface and the sensor data is sampled at a very high rate up to 100Hz. The I2C serial interface can operate at a maximum speed of 400kbps.

The JF2 or JN3 acts as the I2C master and the sensor devices function in Slave mode. This provides a very low latency data pipe for the critical sensor data.

The sensor data can be output to other subsystems in the platform and/or the host processor over the host serial interface and no information is lost.



4. Supported MEMS Devices

The following table lists the MEMS devices currently supported.

Device Type	Manufacturer	Part Number
3-axis accelerometer	Kionix	KXTF9
3-axis accelerometer	Freescale	MMA 8450Q
3-axis magnetometer	Aichi	AMI304
3-axis gyro	ST	L3G4200D

Table 1 Supported MEMS Devices

Note that the MEMS implementation is suitable only for full power applications and does not support the low power modes due to the polling nature of the DR I2C interface.



5. MEMS Static Detection vs Static Navigation (Position Pinning)

The software incorporates a feature referred to as Static Detection that uses the accelerometer data to constrain position drifts and wander during stationary periods of operation.

Previous modules based on SiRFstarIIITM supported a feature referred to as Static Navigation (or Position Pinning) which served a similar purpose but operated under a different algorithm. The SiRFstarIVTM based modules support both Static Navigation and Static Detection.

In Static Navigation, the position output is artificially clamped at the last known value when the receiver velocity falls below a certain threshold ($<1.5\text{m/s}$) for several consecutive seconds. Likewise, the system does not exit the Static Navigation state unless the velocity exceeded a threshold for several consecutive seconds, or if the instantaneous velocity exceeded a much larger threshold. The Static Navigation state is also exited if the position change exceeds a threshold of 40 meters.

With the Static Navigation method, the accuracy of the velocity (speed and heading) measurement is a function of the actual true velocity of the device. This means the measurements made at low velocity settings are much less accurate than measurements made at higher velocities. The measurement accuracy is also a function of signal level. Speed and heading accuracy degrades as signal level decreases.

The MEMS Static Detection has a different algorithm for constraining the position wander during stationary periods. Static Detection uses the measured data from the 3-axis accelerometer to determine if the receiver is stationary. The software compares the computed velocity to a software-defined threshold, and if the velocity is below the threshold, the Static Detection feature is invoked. This is an improvement over the earlier Static Navigation method because the accuracy of the accelerometer data is not a function of the dynamics of the receiver or the signal level of the GPS satellites. The ability to sense and react to stationary conditions is therefore completely independent and decoupled from the GPS measurements themselves.



6. MEMS Sensor OSP Messages

The table below lists the OSP messages that configure, enable/disable and report the MEMS sensor data.

OSP Message	I/O	Message ID, Sub-ID
Sensor Configuration	Input	234, 1
Sensor Switch	Input	234, 2
Sensor Data Message	Output	72, 1
Receiver State Message	Output	72, 3

Table 2 MEMS Sensor OSP Messages

6.1. Accelerometer

The following example messages are meant for the KXTF9 with the following settings:

- Data Resolution: 12 bits
- Sample Rate (06): 50Hz
- Send Rate (03): 5Hz
- Decimation Method: Raw

6.1.1. Configuration

```
EA 01 01 02 00 0F 01 00 CD 06 03 00 20 01 01 43 06 1B 00 80 02 1B 01 1D 01 02 20
1B C0 1D 4D 01 00 00 04 00
```

Sensors Configuration (ALL VALUES MUST BE IN HEXT FORMAT)	
0x01	Number of sensors: 1
0x02	I2C bus speed: Fast
Configuration for Sensor #2 (KXTF9)	
0x000F	Sensor I2C Address (7 or 10 bit)



JF2 and JN3 MEMS Sensor Application Note

80000NT10074A Rev.2 2012-09-19

0x01	Sensor Type: Accelerometer
0x00	Initialization period after power up for Sensor, unit: 10ms
0xCD	Read Register Description for Sensor 1: Signed 2's complement data, 6 bytes to read (3 sensor axes), data resolution of 12
0x06	Sample rate: 50Hz
0x03	Send Rate: 5Hz
0x00	Data decimation method (bits 0-2): Raw
0x20	Acquisition time delay, unit: 10μs
0x01	Number of sensor read registers
0x01	Measurement State: Forced (SW controlling)
0x043, 0x06	Read Register #1: (Read Operation, Register Address) Read Operation Bit Definition: Bit7 ~ Bit4: Number of Right Shift before sending to host Bit3 ~ Bit2: Reserved Bit1: Endian, 0 = big, 1 = little Bit0: Read mode, 0 = read only, 1 = write with repeated start read
0x1B	Address of the Register to controls the sensor power states
0x00	Setting for Stand-by (OFF) mode
0x80	Setting for Operating (ON) mode
0x02	Number of Initialization Registers to be read
0x1B, 0x01	Init Read Register #1: (Register Address, Number of Bytes)
0x1D, 0x01	Init Read Register #2: (Register Address, Number of Bytes)
0x02	Number of sensor control registers
0x20	Time delay between two consecutive register writes, unit: ms
0x1B, 0xC0	CTRL_REG1: (Register Address, Value) OpMode, Resolution 12bit
0x1D, 0x4D	CTRL_REG3: (Register Address, Value) Default



0x01	Sensor Data Processing Rate
0x00	Sensor #2 Zero Point Value
0x400	Sensor #2 Scale Factor (sensitivity)

NOTE: Start Sequence, Payload, Checksum, and End Sequence needs to be added to the message.

6.1.2. Enable Message

To enable the sensors, the sensor enable message:

- EA 02 03

This command turns both the sensor set and the receiver state change notification on.

NOTE: Start Sequence, Payload, Checksum, and End Sequence needs to be added to the message.



7. Reference Design

7.1. Accelerometer

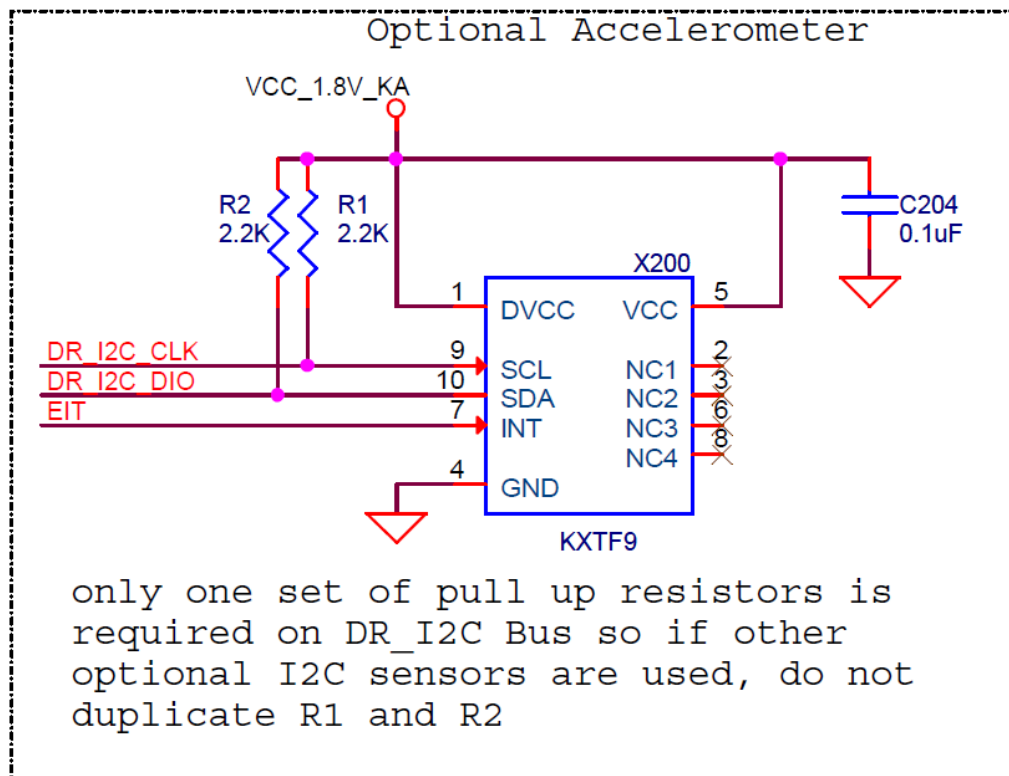


Figure 1 Accelerometer Reference Design

7.1.1. JF2 Connections

DR_I2C_CLK – Pin 29 (GPIO1)
DR_I2C_DIO- Pin 30 (GPIO0)
EIT/GPIO4 – Pin 15 (GPIO4)

7.1.2. JN3 Rev L Connections

DR_I2C_CLK – Pin 19
DR_I2C_DATA – Pin 18
EIT – Pin 4 (EXT_INT)



7.2. Magnetometer

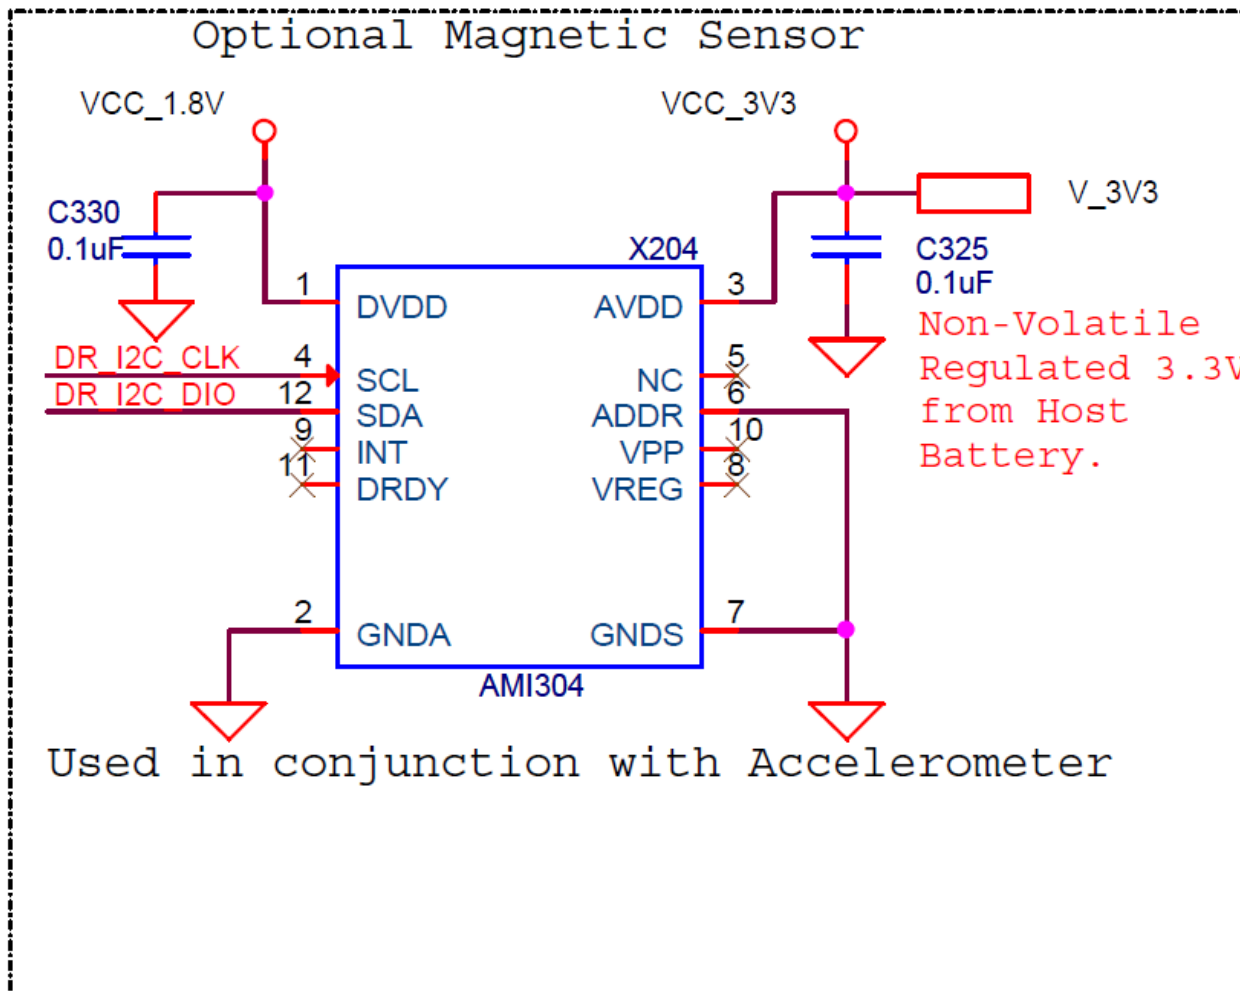


Figure 2 Magnetic Sensor Reference Design

7.2.1. JF2 Connections

DR_I2C_CLK – Pin 29 (GPIO1)
DR_I2C_DIO- Pin 30 (GPIO0)

7.2.2. JN3 Rev L Connections

DR_I2C_CLK – Pin 19
DR_I2C_DATA – Pin 18



7.3. Optional Pressure Sensor

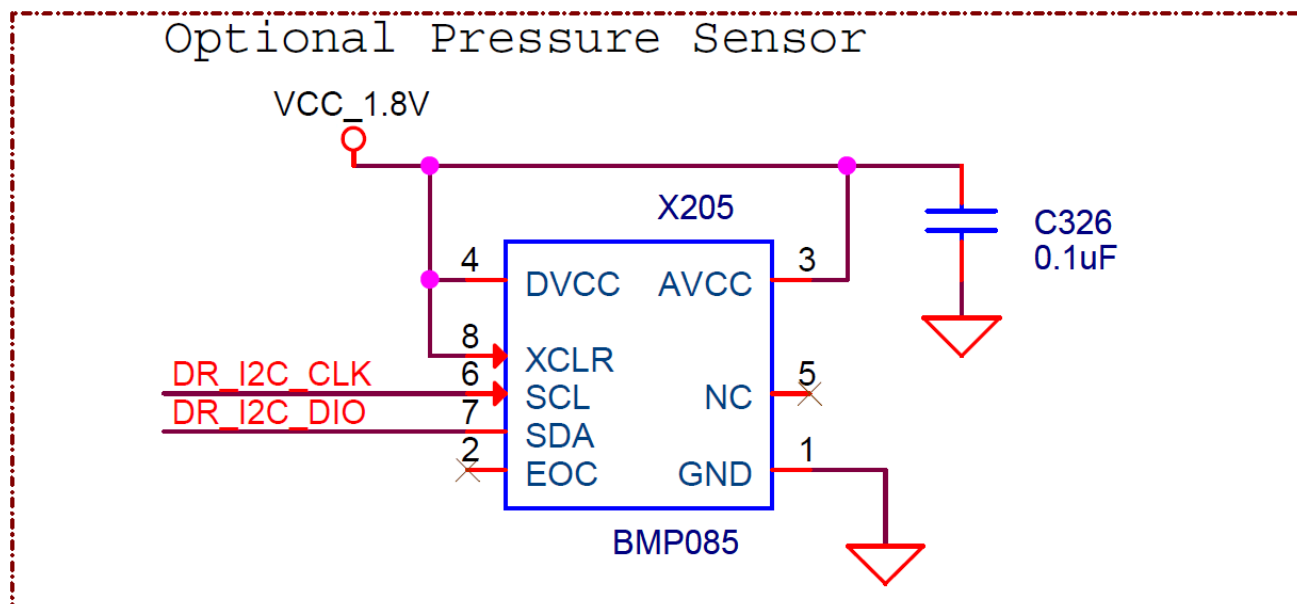


Figure 3 Pressure Sensor Reference Design

7.3.1. JF2 Connections

DR_I2C_CLK – Pin 29 (GPIO1)
DR_I2C_DIO- Pin 30 (GPIO0)

7.3.2. JN3 Rev L Connections

DR_I2C_CLK – Pin 19
DR_I2C_DATA – Pin 18



7.4. Optional Gyroscope

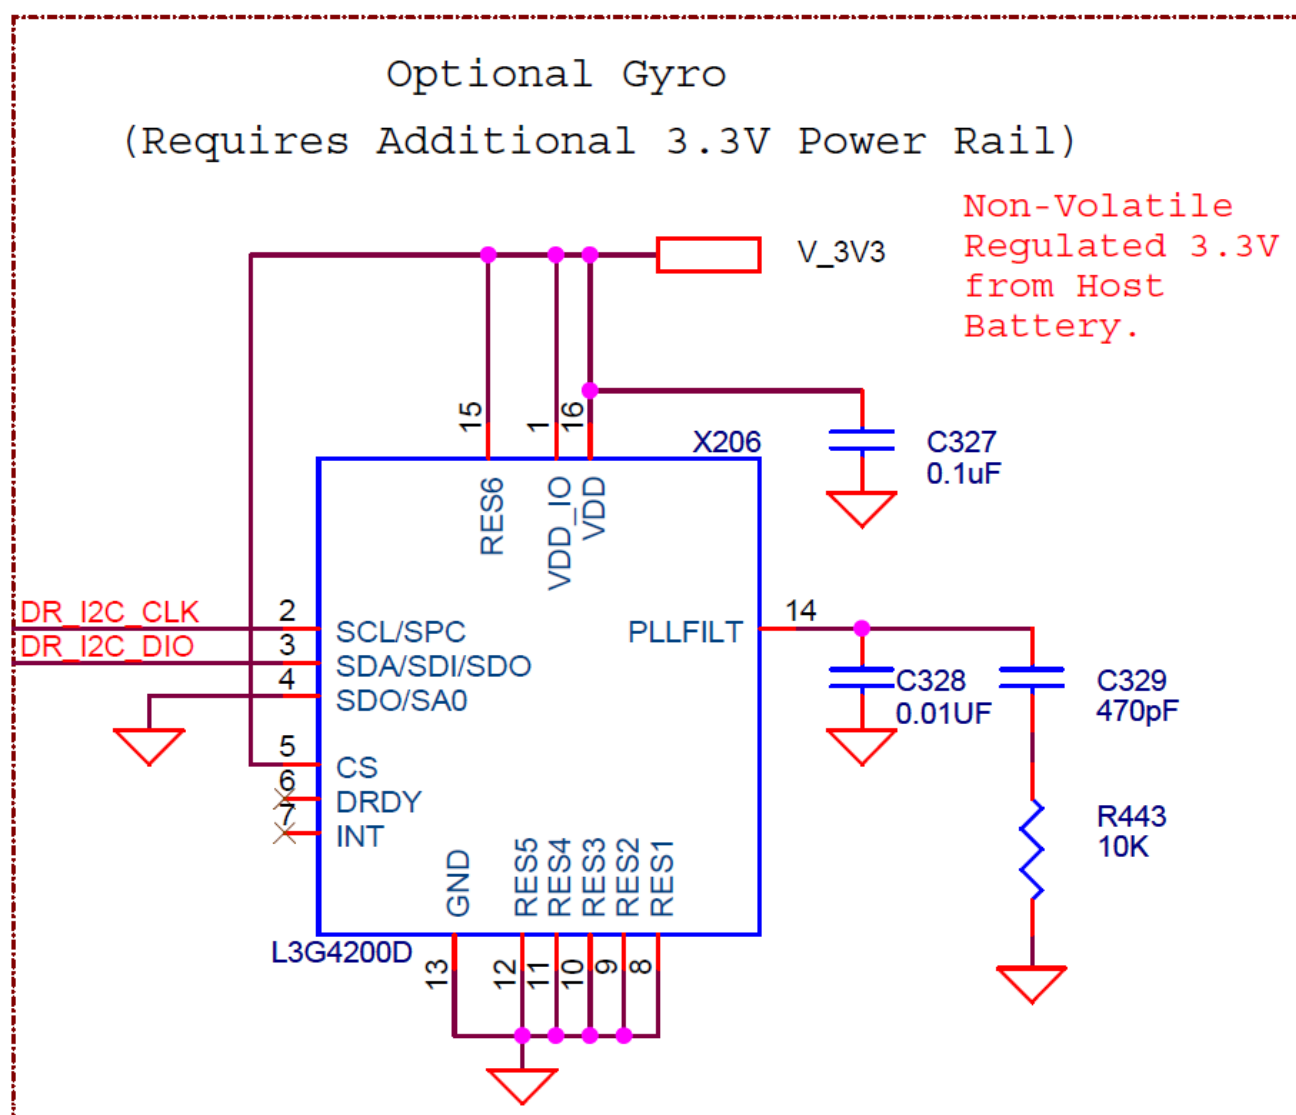


Figure 4 Reference Design Gyroscope

7.4.1. JF2 Connections

DR_I2C_CLK – Pin 29 (GPIO1)
DR_I2C_DIO- Pin 30 (GPIO0)

7.4.2. JN3 Rev L Connections

DR_I2C_CLK – Pin 19
DR_I2C_DATA – Pin 18



8.

Revision	Date	Changes
0	2012-08-08	First issue
1	2012-08-15	Updated 6.1.1 table
2	2012-09-19	Added Pressure Sensor and Gyro reference design

