

CE910 Series Hardware User Guide





1vv0301010 Rev.11 - 2016-04-14

APPLICABILITY TABLE

PRODUCT
CE910-DUAL
CE910B-DUAL(*)
CE910-SC

(*) CE910B-DUAL is the "model name" of the CE910-DUAL HW2.0 variant with the support for Band Class 10 (BC10)



1vv0301010 Rev.11 - 2016-04-14

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



1vv0301010 Rev.11 - 2016-04-14

Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A.



Contents

1. In	troduction	8
1.1.	Scope	8
1.2.	Audience	8
1.3.	Contact Information, Support	8
1.4.	Document Organization	9
1.5.	Text Conventions	1 C
1.6.	Related Documents	1 C
2. Ge	neral Product Description	11
2.1.	Overview	11
2.2.	Product Specifications	12
2.3.	RoHS Compliance	12
3. CE	910 Module Connections	13
3.1.	Pin-Out	18
	<u> </u>	
	rdware Commands	20
	rdware Commands	20
4. Ha	rdware Commands	2 C 2 C
4.1. 4.1. 4.2.	rdware Commands	2 C 2 C
4.1. 4.1. 4.2. 4.2.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command	2 C 2 C 2 4 2 4
4.1. 4.1. 4.2. 4.2. 4.2.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF*	20 20 24 24
4.1. 4.1. 4.2. 4.2.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module	20 20 24 25 26
4.1. 4.1. 4.2. 4.2. 4.2. 4.3.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module Hardware Unconditional Shutdown	20 20 24 25 26
4.1. 4.1. 4.2. 4.2. 4.2. 4.2. 4.2.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module Hardware Unconditional Shutdown Fast power down	2 C 2 C 2 4 2 4 2 5 2 6 3 1
4. Ha 4.1. 4.2. 4.2. 4.3. 4.4. 4.5. 4.5.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module Hardware Unconditional Shutdown Fast power down	20 24 24 25 26 31
4. Ha 4.1. 4.2. 4.2. 4.3. 4.4. 4.5. 4.5.	rdware Commands Turning on the CE910 module	20 24 24 25 26 31 31
4. Ha 4.1. 4.2. 4.2. 4.3. 4.4. 4.5. 4.5.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module Hardware Unconditional Shutdown Fast power down 1. Fast Shut Down by Hardware wer Supply	20 24 24 25 26 31 31
4.1. 4.1. 4.2. 4.2. 4.2. 4.3. 4.4. 4.5. 4.5. 5. Po 5.1. 5.2. 5.3.	rdware Commands Turning on the CE910 module 1. Initialization and Activation State Turning off the CE910 module 1. Turning OFF by AT Command 2. Turning OFF by tying low ON_OFF* Summary of Turning ON and OFF the Module Hardware Unconditional Shutdown Fast power down 1. Fast Shut Down by Hardware wer Supply Power Supply Requirements	20 24 24 25 26 31 31 33 33



	5.3.2. 5.3.3. 5.3.4. 5.3.5. 5.3.6.	+ 5V Input Source Power Supply Design Guidelines	36 37 37
6.	Ante	nna	40
6	.1. C	DMA Antenna Requirements	40
6	.2. C	DMA antenna - PCB line Guidelines	41
6	.3. C	DMA Antenna installation Guidelines	41
7.	USB	Port	42
8.	Seri	al Port	43
8	.1. M	odem Serial Port 1	44
8	.2. M	odem Serial Port 2	46
8	.3. R	S232 Level Translation	47
9.	Audi	o Section Overview	48
	9.1.1. 9.1.2. 9.1.3.		49 50 51 52
10	. Gene	ral Purpose I/O	53
1	0.1.	Logic Level Specification	54
1	0.2.	Using a GPIO Pad as Input	54
1	0.3.	Using a GPIO Pad as Output	55
1	0.4.	Indication of Network Service Availability	55
1	0.5.	RTC Bypass Output	56
1	0.6.	VAUX/PWRMON Power Output	56
11		section	E 0
	. ADC	Section	20
	1.1.	Description	



12.	Test	Point	59
13.	Mount	ting CE910 on the Application	60
13.	1.	General	60
13.	2.	Module Finishing & Dimensions	60
13.	3.	Recommended foot print for the application	61
13.	4.	Stencil	62
13.	5.	PCB Pad Design	62
13.	6.	Recommendations for PCB Pad Dimensions (mm)	62
		Solder Paste	
1	3.7.1	. Solder Reflow	64
14.	Packi	ing System	66
14.	1.	Tray	66
14.	2.	Reel	68
1	4.2.1	÷	
	4.2.2.		
	4.2.3		
14.	3.	Moisture Sensibility	70
15.	Appli	ication Design Guide	71
15.	1.	Download and Debug Port	71
16.	Conf	ormity Assessment Issues (Problèmes d'évaluation de conformité)	72
17.	Safet	ty Recommendations	76
18.	Docur	ment History	77



1vv0301010 Rev.11 - 2016-04-14

1. Introduction

1.1. Scope

The aim of this document is the description of typical hardware solutions useful for developing a product with the Telit CE910 module.

1.2. Audience

This document is intended for Telit customers who are about to implement their applications using our CE910 modules.

1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-EMEA@telit.com

TS-AMERICAS@telit.com

TS-APAC@telit.com

Alternatively, use:

http://www.telit.com/en/products/technical-support-center/contact.php

For detailed information about where to buy the Telit modules or for recommendations on accessories and components visit:

http://www.telit.com

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Please keep us informed of comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.



1vv0301010 Rev.11 - 2016-04-14

1.4. Document Organization

This document contains the following chapters:

<u>Chapter 1: "Introduction"</u> provides a scope for this document, target audience, contact and support information, and text conventions.

Chapter 2: "General Product Description" gives an overview of the features of the product.

Chapter 3: "CE910 Module Connections" deals with the pin out configuration and layout.

<u>Chapter 4: "Hardware Commands"</u> How to operate the module via hardware.

Chapter 5: "Power supply" Power supply requirements and general design rules.

<u>Chapter 6: "Antenna"</u> The antenna connection and board layout design are the most important parts in the full product design.

<u>Chapter 7: "USB Port"</u> The USB port on the Telit CE910 is the core of the interface between the module and OEM hardware.

Chapter 8: "Serial ports" Refers to the serial ports of the Telit CE910.

<u>Chapter 9: "Audio Section overview"</u> Refers to the audio blocks of the Base Band Chip of the CE910 Telit Module.

Chapter 10: "General Purpose I/O" How the general purpose I/O pads can be configured.

<u>Chapter 11: "ADC section"</u> Deals with this one kind of converter.

Chapter 12: "Test Point" Deals with Test Point.

Chapter 13: "Mounting CE910 on the Application" Mechanical dimensions and

recommendations on how to mount the module on the user's board.

Chapter 14: "Packing System" Deals with packing system.

<u>Chapter 15: "Application Design Guide"</u> Deals with the design of host system for download or upgrade.

<u>Chapter 16: "Conformity Assessment Issues"</u> provides some fundamental hints about the conformity assessment that the final application might need.

<u>Chapter 17: "Safety Recommendation"</u> provides some safety recommendations that must be followed by the customer in the design of the application that makes use of the Telit CE910.

Chapter 18: "Document History" provides document revision history of the Telit CE910.



1vv0301010 Rev.11 - 2016-04-14

1.5. Text Conventions



<u>Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.</u>



Caution or Warning – Alerts the user to important points about integrating the module. If these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.6. Related Documents

- CE910 Software User Guide, 1vv0301011
- CE910 AT Commands Reference Guide, 80399ST10111A
- Telit EVK2 User Guide, 1vv0300704



1vv0301010 Rev.11 - 2016-04-14

2. General Product Description

2.1. Overview

The aim of this document is the description of typical hardware solutions useful for developing a product with the Telit CE910 module.

In this document all the basic functions of a mobile device will be taken into account; for each one of them a proper hardware solution will be suggested and eventually the wrong solutions and common errors to be avoided will be evidenced. Obviously this document cannot embrace all hardware solutions and products that may be designed. Avoiding the discussed wrong solutions must be considered as mandatory. While the suggested hardware configurations must not be considered mandatory, the information given must be used as a guide and a starting point for properly developing a product with the Telit CE910 module.



NOTE:

The integration of the CDMA 1xRTT module within a user application must be done according to the design rules described in this manual.

The information presented in this document is believed to be accurate and reliable. However, no responsibility is assumed by Telit Communication S.p.A. for its use, such as any infringement of patents or other rights of third parties. No license is granted by implication or otherwise under any patent rights of Telit Communication S.p.A. other than for circuitry embodied in Telit products. This document is subject to change without notice.



1vv0301010 Rev.11 - 2016-04-14

2.2. Product Specifications

	CE910 Specifications					
Air Interface	CDMA 1xRTT					
	CE910-DUAL: 800/1900MHz					
Frequency Bands	CE910B-DUAL : 800/1900MHz (BC0/BC10/BC1)					
	CE910-SC: 800MHz					
Data Service	CDMA 1xRTT: 153.6 Kbps (full-duplex)					
	CDMA BC0: Power class 3 (24.5dBm) for 1xRTT					
Max. RF out power	CDMA BC1: Power class 2 (24.5dBm) for 1xRTT					
	• CDMA BC10 : Power class 2 (24.5dBm) for 1xRTT					
	• CDMA BC0: –108dBm					
Typical conducted sensitivity	CDMA BC1: –107dBm					
	• CDMA BC10: -108dBm					
Device dimensions	28.2mm(L) x 28.2mm(W) x 2.05mm(T)					
Weight	3.7g					
Storage and Operating	_40 ~ +85°C					
Temperature Range						
Normal operating voltage	$3.4 \sim 4.2 \text{V}$					
range	3.4 ~ 4.2 V					
IO voltage	1.8V					
	144 Land-Grid-Array interface					
	• 10 general I/O ports maximum including multi-					
	6 1 17/0					
	functional I/Os					
Interface	State LED output					
Interface	State LED output1 A/D converter					
Interface	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps 					
Interface	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging 					
Interface	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps 					
Interface Antenna	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging 					
	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps 					
Antenna	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps Primary antenna, 800/1900MHz Analog audio interface (1 EAR/MIC) SMS (MO/MT) 					
Antenna Audio	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps Primary antenna, 800/1900MHz Analog audio interface (1 EAR/MIC) 					
Antenna Audio	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps Primary antenna, 800/1900MHz Analog audio interface (1 EAR/MIC) SMS (MO/MT) 					
Antenna Audio	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps Primary antenna, 800/1900MHz Analog audio interface (1 EAR/MIC) SMS (MO/MT) CE910-DUAL & CE910B-DUAL: Regulatory: FCC, IC Carrier: Verizon, Sprint, Aeris, US Cellular 					
Antenna Audio Message	 State LED output 1 A/D converter Full RS232 CMOS UART: baud rate up to 4Mbps Reserved two wires CMOS UART for debugging USB 2.0: baud rate up to 12Mbps Primary antenna, 800/1900MHz Analog audio interface (1 EAR/MIC) SMS (MO/MT) CE910-DUAL & CE910B-DUAL: Regulatory: FCC, IC 					

2.3. RoHS Compliance

As a part of Telit's corporate policy of environmental protection, the CE910 complies with the RoHS (Restriction of Hazardous Substances) directive of the European Union (EU directive 2002/95/EG).



3. CE910 Module Connections

3.1. Pin-Out

Pin	Signal	I/O	Function	Type
USB I	FS 2.0 Communication 1	Port		<u> </u>
B15	USB_D+	I/O	USB differential Data(+)	
C15	USB_D-	I/O	USB differential Data(-)	
A13	VUSB	I	Power for the internal USB transceiver	5V
Async	chronous UART – Prog.	/ data	+HW Flow Control	
N15	C103/TXD	I	Serial data input from DTE	CMOS 1.8V
M15	C104/RXD	О	Serial data output to DTE	CMOS 1.8V
M14	C108/DTR	I	Input for (DTR) from DTE	CMOS 1.8V
L14	C105/RTS	I	Input for (RTS) from DTE	CMOS 1.8V
P15	C106/CTS	О	Output for (CTS) to DTE	CMOS 1.8V
N14	C109/DCD	О	Output for (DCD) to DTE	CMOS 1.8V
P14	C107/DSR	О	Output for (DSR) to DTE	CMOS 1.8V
R14	C125/RING	О	Output for (RI) to DTE	CMOS 1.8V
Async	chronous Auxiliary UAF	RT		
D15	TX_AUX	О	Auxiliary UART (TX Data to DTE)	CMOS 1.8V
E15	RX_AUX	I	Auxiliary UART (RX Data from DTE)	CMOS 1.8V
RUIN	I Interface(*NOTE)			
A3	RUIMVCC	-	Reserved but applicable only to RUIM variant : Power supply for the RUIM	1.8/3V
A5	RUIMIO	I/O	Reserved but applicable only to RUIM variant : RUIM Data I/O	1.8/3V
A6	RUIMCLK	О	Reserved but applicable only to RUIM variant : RUIM Clock	1.8/3V
A7	RUIMRST	О	Reserved but applicable only to RUIM variant : RUIM Reset	1.8/3V
Digita	l Voice interface			
B9	DVI_WA0	I/O	Digital Voice interface (WA0)	1.8V
B6	DVI_RX	I	Digital Voice interface (RX)	1.8V
B7	DVI_TX	О	Digital Voice interface (TX)	1.8V
B8	DVI_CLK	I/O	Digital Voice interface (CLK)	1.8V
Analo	g Voice Interface			
B2	EAR+	AO	Earphone signal output, phase +	
В3	EAR-	AO	Earphone signal output, phase -	
B4	MIC+	AI	Microphone input, phase +	
B5	MIC-	ΑI	Microphone input, phase -	
Digita	al IO			
C8	GPIO_01	I/O	GPIO_01 / STAT LED	CMOS 1.8V
C9	GPIO_02	I/O	GPIO_02	CMOS 1.8V
C10	GPIO_03	I/O	GPIO_03	CMOS 1.8V





Pin	Signal	I/O	Function	Type
C11	GPIO_04	I/O	GPIO_04	CMOS 1.8V
B14	GPIO_05	I/O	GPIO_05	CMOS 1.8V
C12	GPIO_06	I/O	GPIO_06	CMOS 1.8V
C13	GPIO_07	I/O	GPIO_07	CMOS 1.8V
K15	GPIO_08	I/O	GPIO_08	CMOS 1.8V
L15	GPIO_09	I/O	GPIO_09	CMOS 1.8V
G15	GPIO_10	I/O	GPIO_10	CMOS 1.8V
ADC	Section			
B1	ADC_IN1	ΑI	Analog to Digital converter input	A/D
RF Se	ection			
K1	Antenna	I/O	CDMA Antenna (500hm)	RF
Misce	llaneous Functions			
R13	HW_SHUTDOWN*	I	Hardware Unconditional Shutdown	Pull up to VBATT
R12	ON_OFF*	I	Input Command for Power ON	CMOS 1.8V
C14	VRTC	I	RTC Power	Power
R11	VAUX/PWRMON	О	Supply Output for external accessories / Power ON Monitor	1.8V
Test I	Point			
C3	TP1		Test Point	TP
C4	TP2		Test Point	TP
C5	TP3		Test Point	TP
C6	TP4		Test Point	TP
C7	TP5		Test Point	TP
D3	TP6		Test Point	TP
E3	TP7		Test Point	TP
Power	r Supply			
M1	VBATT	-	Main Power Supply (Baseband)	Power
M2	VBATT	-	Main Power Supply (Baseband)	Power
N1	VBATT_PA	-	Main Power Supply (Radio PA)	Power
N2	VBATT_PA	-	Main Power Supply (Radio PA)	Power
P1	VBATT_PA	-	Main Power Supply (Radio PA)	Power
P2	VBATT_PA	-	Main Power Supply (Radio PA)	Power
E1	GND	-	Ground	
G1	GND	-	Ground	
H1	GND	-	Ground	
J1	GND	-	Ground	
L1	GND	-	Ground	
A2	GND	-	Ground	
E2	GND	-	Ground	
F2	GND	-	Ground	
G2	GND	-	Ground	
H2	GND	-	Ground	
J2	GND	-	Ground	
K2	GND	-	Ground	
L2	GND	-	Ground	
R2	GND	-	Ground	





Pin	Signal	I/O	Function	Type
M3	GND	-	Ground	
N3	GND	-	Ground	
P3	GND	-	Ground	
R3	GND	-	Ground	
D4	GND	-	Ground	
M4	GND	-	Ground	
N4	GND	-	Ground	
P4	GND	-	Ground	
R4	GND	-	Ground	
N5	GND	-	Ground	
P5	GND	-	Ground	
R5	GND	-	Ground	
N6	GND	-	Ground	
P6	GND	-	Ground	
R6	GND	-	Ground	
P8	GND	-	Ground	
R8	GND		Ground	
P9	GND	-	Ground	
P10	GND	-	Ground	
R10	GND	-	Ground	
M12	GND	-	Ground	
B13	GND	-	Ground	
P13	GND	-	Ground	
E14	GND	-	Ground	
Reser		l		
C1	Reserved	-	Reserved	
D1	Reserved	-	Reserved	
F1	Reserved	-	Reserved	
C2	Reserved	-	Reserved	
D2 F3	Reserved Reserved	-	Reserved	
G3	Reserved	-	Reserved Reserved	
H3	Reserved	_	Reserved	
J3	Reserved	_	Reserved	
K3	Reserved	_	Reserved	
L3	Reserved	_	Reserved	
A4	Reserved	_	Reserved	
N7	Reserved	_	Reserved	
P7	Reserved	_	Reserved	
R7	Reserved	_	Reserved	
A8	Reserved	_	Reserved	
N8	Reserved	_	Reserved	
A9	Reserved	_	Reserved	
N9	Reserved	_	Reserved	
R9	Reserved	_	Reserved	
A10	Reserved	_	Reserved	
AIU	ACSCI VCG		TODOI YOU	





1vv0301010 Rev.11 - 2016-04-14

Pin	Signal	I/O	Function	Type
B10	Reserved	-	Reserved	
N10	Reserved	-	Reserved	
A11	Reserved	-	Reserved	
B11	Reserved	-	Reserved	
N11	Reserved	-	Reserved	
P11	Reserved	-	Reserved	
A12	Reserved	-	Reserved	
B12	Reserved	-	Reserved	
D12	Reserved	-	Reserved	
N12	Reserved	-	Reserved	
P12	Reserved	-	Reserved	
D13	Reserved	-	Reserved	
E13	Reserved	-	Reserved	
F13	Reserved	ı	Reserved	
G13	Reserved	ı	Reserved	
H13	Reserved	ı	Reserved	
J13	Reserved	ı	Reserved	
K13	Reserved	ı	Reserved	
L13	Reserved	ı	Reserved	
M13	Reserved	-	Reserved	
N13	Reserved	-	Reserved	
A14	Reserved	-	Reserved	
D14	Reserved	-	Reserved	
F14	Reserved	-	Reserved	
G14	Reserved	-	Reserved	
H14	Reserved	-	Reserved	
J14	Reserved	-	Reserved	
K14	Reserved	-	Reserved	
F15	Reserved	•	Reserved	
H15	Reserved	_	Reserved	
J15	Reserved	ı	Reserved	



*NOTE:

RUIM interface is reserved for Verizon/Sprint/Aeris/US Cellular variants and it is applicable only to RUIM variant of CE910 (CE910-SC).



WARNING:

Reserved pins must not be connected.





1vv0301010 Rev.11 - 2016-04-14



NOTE:

The following table is listing the main Pinout differences between the CE910 variants.

Product	BC0	BC10	BC1	Notes
CE910-DUAL	Yes	No	Yes	Reserved pads: A3, A5, A6, A7
CE910B-DUAL	Yes	Yes	Yes	Reserved pads: A3, A5, A6, A7
CE910-SC	Yes	No	No	



NOTE:

If not used, almost all pins not in use must be left disconnected. The only exceptions are the following pins:

PAD	Signal	Notes
M1,M2,N1,N2,P1,P2	VBATT&VBATT_PA	
E1,G1,H1,J1,L1,A2,E2,F2,G2 H2,J2,K2,L2,R2,M3,N3,P3,R3 D4,M4N4,P4,R4,N5,P5,R5,N6 P6,R6,P8R8,P9,P10,R10,M12 B13,P13,E14	GND	
R12	ON/OFF*	
R13	HW_SHUTDOWN*	
B15	USB_D+	If not used it should be connected to a Test point.
C15	USB_D-	If not used it should be connected to a Test point.
A13	VUSB	If not used it should be connected to a Test point.
N15	C103/TXD	If not used it should be connected to a Test point.
M15	C104/RXD	If not used it should be connected to a Test point.
L14	C105/RTS	If the flow control is not used it should be connected to GND.
P15	C106/CTS	If not used it should be connected to a Test point.
D15	TX_AUX	If not used it should be connected to a Test point.
E15	RX_AUX	If not used it should be connected to a Test point.
K1	Main Antenna	
C3,C4,C5,C6,C7,D3,E3	Test Point	



1vv0301010 Rev.11 - 2016-04-14

3.1.1. LGA Pads Layout (CE910-DUAL & CE910B-DUAL)

	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	R	\Box
1		ADC_IN1	RES	RES	GND	RES	GND	GND	GND	ANTENNA	GND	VBATT	VBATT_PA	VBATT_PA		1
2	GND	EAR+	RES	RES	GND	GND	GND	GND	GND	GND	GND	VBATT	VBATT_PA	VBATT_PA	GND	2
3	RES	EAR-	TP1	TP6	TP7	RES	RES	RES	RES	RES	RES	GND	GND	GND	GND	3
4	RES	MIC+	TP2	GND								GND	GND	GND	GND	4
5	RES	MIC-	TP3										GND	GND	GND	5
6	RES	DVI_RX	TP4										GND	GND	GND	6
7	RES	DVI_TX	TP5										RES	RES	RES	7
8	RES	DVI_CLK	GPIO_01/ STAT_LED										RES	GND	GND	8
9	RES	DVI_WA0	GPIO_02										RES	GND	RES	9
10	RES	RES	GPIO_03										RES	GND	GND	10
11	RES	RES	GPIO_04										RES	RES	VAUX/PWRM ON	11
12	RES	RES	GPIO_06	RES								GND	RES	RES	ON_OFF*	12
13	VUSB	GND	GPIO_07	RES	RES	RES	RES	RES	RES	RES	RES	RES	RES	GND	HW_SHUTD OWN*	13
14	RES	GPIO_05	VRTC	RES	GND	RES	RES	RES	RES	RES	C105/RTS	C108/DTR	C109/DCD	C107/DSR	C125/RING	14
15		USB_D+	USB_D-	TX_AUX	RX_AUX	RES	GPIO_10	RES	RES	GPIO_08	GPIO_09	C104/RXD	C103/TXD	C106/CTS		15
	Α	В	С	D	Е	F	G	Н	J	K	L	М	N	Р	R	

Top View



NOTE:

The pin defined as RES must be considered RESERVED and not connected on any pin in the application. The related area on the application has to be kept empty.





1vv0301010 Rev.11 - 2016-04-14

3.1.2. LGA Pads Layout (CE910-SC)

	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	R	\Box
1		ADC_IN1	RES	RES	GND	RES	GND	GND	GND	ANTENNA	GND	VBATT	VBATT_PA	VBATT_PA		1
2	GND	EAR+	RES	RES	GND	GND	GND	GND	GND	GND	GND	VBATT	VBATT_PA	VBATT_PA	GND	2
3	RUIMVCC	EAR-	TP1	TP6	TP7	RES	RES	RES	RES	RES	RES	GND	GND	GND	GND	3
4	RES	MIC+	TP2	GND								GND	GND	GND	GND	4
5	RUIMIO	MIC-	TP3										GND	GND	GND	5
6	RUIMCLK	DVI_RX	TP4										GND	GND	GND	6
7	RUIMRST	DVI_TX	TP5										RES	RES	RES	7
8	RES	DVI_CLK	GPIO_01/ STAT_LED										RES	GND	GND	8
9	RES	DVI_WA0	GPIO_02										RES	GND	RES	9
10	RES	RES	GPIO_03										RES	GND	GND	10
11	RES	RES	GPIO_04										RES	RES	VAUX/PWRM ON	11
12	RES	RES	GPIO_06	RES								GND	RES	RES	ON_OFF*	12
13	VUSB	GND	GPIO_07	RES	RES	RES	RES	RES	RES	RES	RES	RES	RES	GND	HW_SHUTD OWN*	13
14	RES	GPIO_05	VRTC	RES	GND	RES	RES	RES	RES	RES	C105/RTS	C108/DTR	C109/DCD	C107/DSR	C125/RING	14
15		USB_D+	USB_D-	TX_AUX	RX_AUX	RES	GPIO_10	RES	RES	GPIO_08	GPIO_09	C104/RXD	C103/TXD	C106/CTS		15
	Α	В	С	D	E	F	G	Н	J	К	L	М	N	Р	R	

Top View



NOTE:

The pin defined as RES must be considered RESERVED and not connected on any pin in the application. The related area on the application has to be kept empty.






1vv0301010 Rev.11 - 2016-04-14

4. Hardware Commands

4.1. Turning on the CE910 module

To turn on the CE910, the pad ON_OFF* must be tied low for at least 1.5 second and then released. The maximum current that can be drained from the ON_OFF* pad is 0.1 mA.


A simple circuit to power on the module is illustrated below:

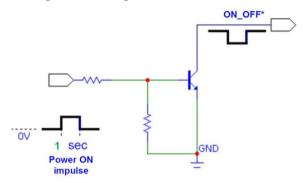

4.1.1. Initialization and Activation State

Upon turning on CE910 module, the CE910 module is not active yet because the boot sequence of CE910 is still executing internally. It takes about 10 seconds to complete the initialization of the module internally.

For this reason, it would be useless to try to access CE910 during the Initialization state as below. The CE910 module needs at least 10 seconds after the PWRMON goes High to become operational by reaching the activation state.

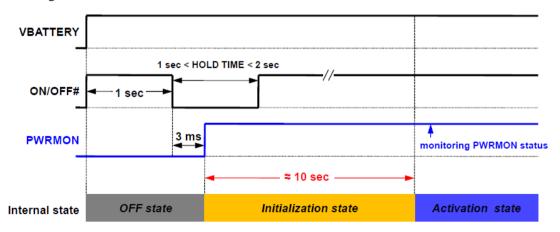



1vv0301010 Rev.11 - 2016-04-14

During the *Initialization state*, any kind of AT-command is not available. DTE must wait for the *Activation state* to communicate with CE910.

To check if the CE910 has powered on, the hardware line VAUX/PWRMON must be monitored. When VAUX/PWRMON goes high, the module has powered on.



NOTE:

Do not use any pull up resistor on the ON_OFF^* line. It is pulled up with $200k\Omega$ internally. Using a pull up resistor may bring latch up problems on the CE910 power regulator and improper power on/off of the module. The line ON_OFF* must be connected only in open collector configuration.



NOTE:

In this document all the lines are inverted. Active low signals are labeled with a name that ends with "*" or with a bar over the name.




NOTE:


In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the CE910 module when the module is powered OFF or during an ON/OFF transition.

For example:

1. To drive the ON_OFF* pad with a totem pole output of a +3/5 V microcontroller (uP_OUT1):

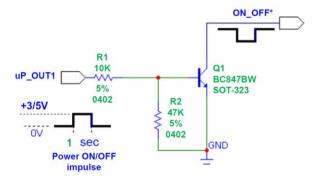


2. To drive the ON_OFF* pad directly with an ON/OFF button:

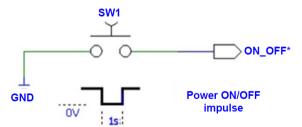



1vv0301010 Rev.11 - 2016-04-14


A flow chart the proper turn on procedure is displayed below:

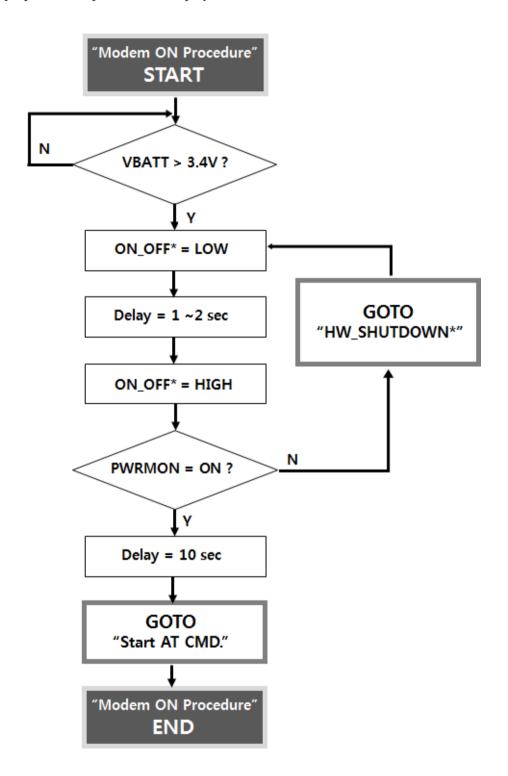



1vv0301010 Rev.11 - 2016-04-14

A flow chart showing the AT commands managing procedure is displayed below:

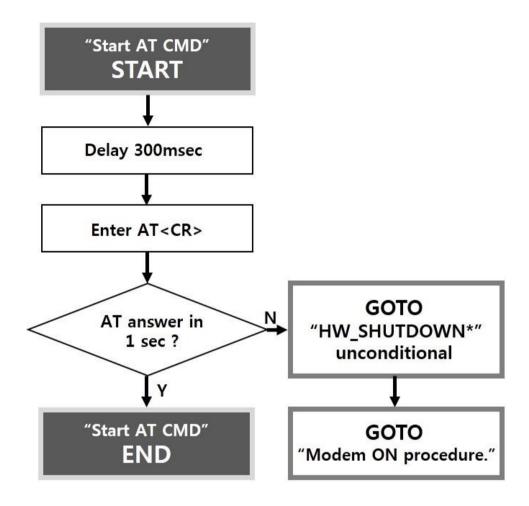



1vv0301010 Rev.11 - 2016-04-14

4.2. Turning off the CE910 module

Turning off the device can be done in two ways:

- via AT command (see CE910 Software User Guide, AT#SHDN)
- by tying low pin ON_OFF*

Either ways, the device issues a detach request to network informing that the device will not be reachable any more.

To turn OFF the CE910 the pad ON_OFF* must be tied low for at least 2.5 seconds and then released.



TIP:

To check if the device has powered off, hardware line PWRMON must be monitored.

The device is powered off when PWRMON goes low.



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the CE910 when the module is powered OFF or during an ON/OFF transition.

4.2.1. Turning OFF by AT Command


The CE910 can be shut down by a software command.

When a shutdown command is sent, the CE910 goes into the finalization state and will shut down PWRMON at the end of this state. The period of the finalization state can vary according to the state of the CE910 so it cannot be fixed definitely.

Normally it will be 10 seconds after sending a shutdown command and DTE should monitor the status of PWRMON to see the actual power off.



1vv0301010 Rev.11 - 2016-04-14

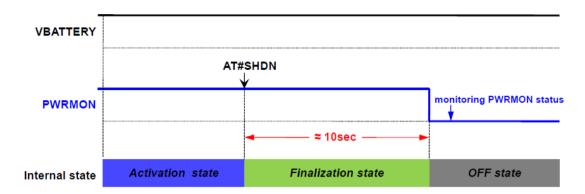


4.2.2. Turning OFF by tying low ON OFF*

To turn OFF the CE910 the pad ON_OFF* must be tied low for at least 2 seconds and then released. The same circuitry and timing for the power on must be used.

When the hold time of ON_OFF* is above 2 seconds, the CE910 goes into the finalization state and will shut down PWRMON at the end of this state.

The period of the finalization state can vary according to the state of the CE910 so it cannot be fixed definitely.

Normally it will be 10 seconds after releasing ON_OFF* and DTE should monitor the status of PWRMON to see the actual power off.

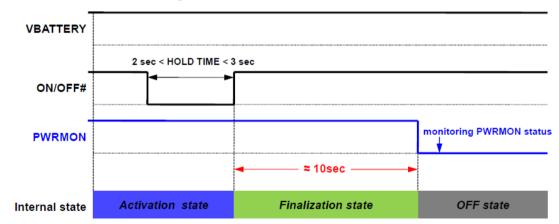




1vv0301010 Rev.11 - 2016-04-14

4.3. Summary of Turning ON and OFF the Module


The chart below describes the overall sequences for turning ON and OFF the module.

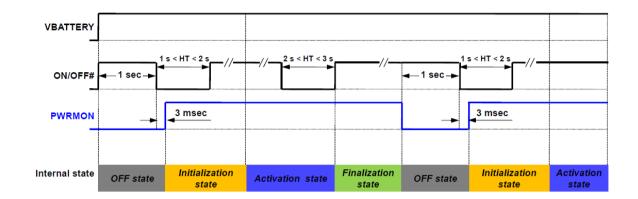



1vv0301010 Rev.11 - 2016-04-14

The following flow chart shows the proper turn off procedure:

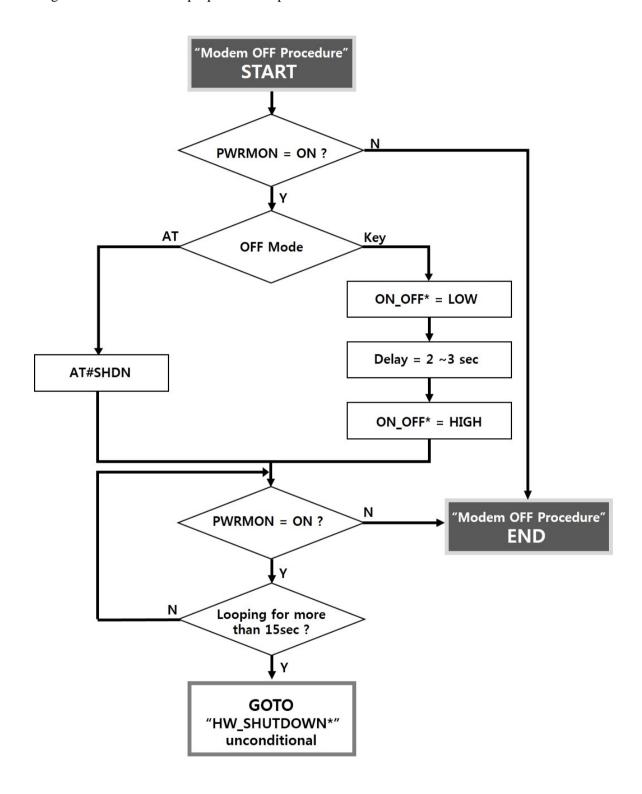



1vv0301010 Rev.11 - 2016-04-14

4.4. Hardware Unconditional Shutdown

The Unconditional shutdown of the module could be activated using the HW_SHUTDOWN* line (pad R13).



WARNING:

The hardware unconditional shutdown must NOT be used during normal operation of the device since it does not detach the device from the network. It shall be used as an emergency exit procedure.

To unconditionally shutdown the CE910, the pad HW_SHUTDOWN* must be tied low for at least 3 seconds and then released.



NOTE:

Do not use any pull up resistor on the HW_SHUTDOWN* line nor any totem pole digital output. It is pulled up internally to VBATT with $57k\Omega$. Using an external pull up resistor may bring latch up problems on the CE910 power regulator and improper functioning of the module.

The line HW_SHUTDOWN* must be connected only in open collector configuration.

The HW_SHUTDOWN* will generate an unconditional shutdown of the module without an automatic restart.

The module will shut down but will NOT perform a detach from the cellular network.


To proper power on again the module please refer to 4.1 Turning ON the CE910.



TIP:

The unconditional hardware shutdown must always be implemented on the boards and the software must use it only as an emergency exit procedure.

A simple circuit to unconditionally shutdown the module is illustrated below:

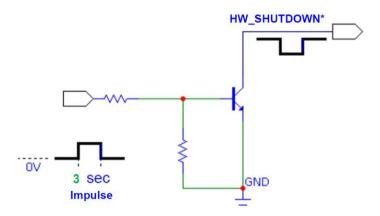




1vv0301010 Rev.11 - 2016-04-14

For example:

Let us assume you need to drive the HW_SHUTDOWN* pad with a totem pole output of a +3/5 V microcontroller (uP OUT2):

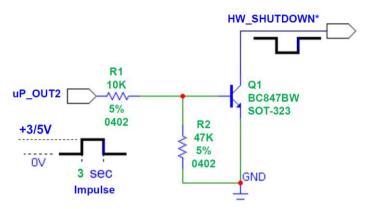




NOTE: In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the CE910 when the module is powered OFF or during an ON/OFF transition.





1vv0301010 Rev.11 - 2016-04-14

In the following flow chart is detailed the proper restart procedure:

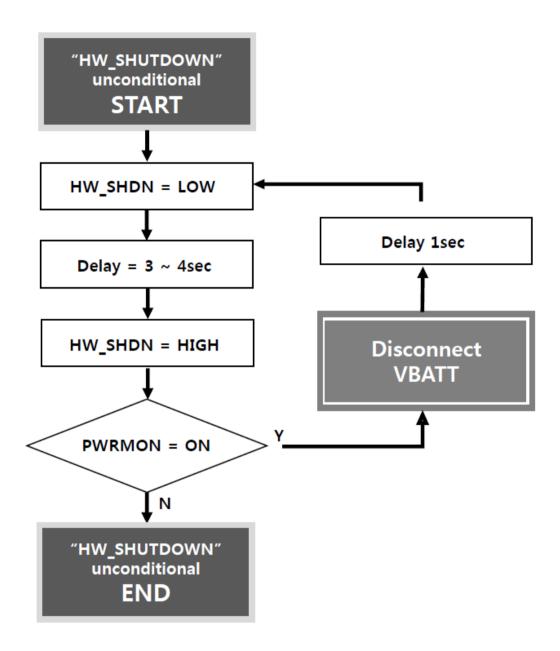



1vv0301010 Rev.11 - 2016-04-14

4.5. Fast power down

The procedure to power off CE910 described in Chapter 4.2 normally takes more than 12 second to de-attach network and make CE910 internal filesystem properly closed.

The Fast Power Down feature permits to reduce the current consumption and the time-to-power off to minimum values.




NOTE:

Refer to CE910 series AT command reference guide (Fast power down - #FASTSHDN) in order to set up detailed AT command.

4.5.1. Fast Shut Down by Hardware

The module provides an input to give to the FW of the module advance notice that the power source is failing and allow it to prepare for the power failure.

The Fast Power Down can be triggered by configuration of any GPIO. HIGH level to LOW level transition of GPIO forces the fast power down procedure

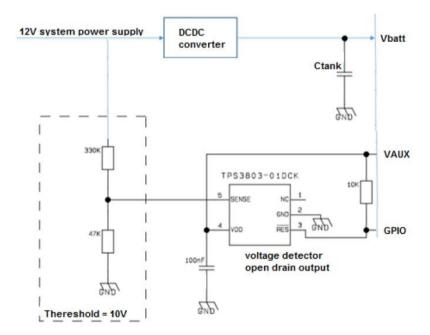




1vv0301010 Rev.11 - 2016-04-14



NOTE:

Consider voltage drop under max current conditions when defining the voltage detector threshold in order to avoid unwanted shutdown.

The below paragraph will be updated.

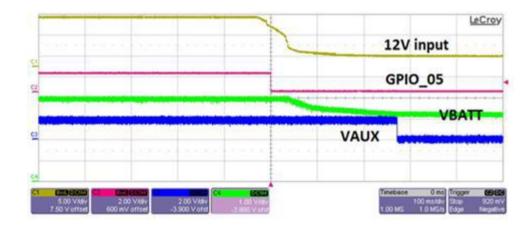

Typical timings are reported in the plot above when testing the example circuit with Ctank=47mF. The capacitor is rated with the following formula:

$$C = I \frac{\Delta t}{\Delta V}$$

Where 80mA is a typical current during fast shut down procedure, 300ms is the typical time to execute the shutdown and 0.5V is the minimum voltage margin from threshold of CE910 hardware reset.



NOTE:

Make the same plot during system verification to check timings and voltage levels.



WARNING:

Ctank associated with low ESR requires current limiting feature in DCDC converter to avoid side effect of inrush current.



1vv0301010 Rev.11 - 2016-04-14

5. Power Supply

The power supply circuitry and board layout are a very important part in the full product design and they strongly reflect on the product's overall performance. Read carefully the requirements and the guidelines that follow for a proper design.

5.1. Power Supply Requirements

The external power supply must be connected to VBATT & VBATT_PA signals and must fulfill the following requirements:

Power Supply					
Nominal Supply Voltage	3.8V				
Normal Operating Voltage range	3.4V ~ 4.2V				
Extended Operating Voltage range	3.4V ~ 4.5V				



NOTE:

The Operating Voltage Range MUST never be exceeded. Special care must be taken when designing the application's power supply section to avoid having an excessive voltage drop.

If the voltage drop is exceeding the limits it could cause a Power Off of the module.



1vv0301010 Rev.11 - 2016-04-14

5.2. Power Consumption

CE910							
Mode	Average (mA)	Mode Description					
Power off curren	t (Typical)	140uA(*1)					
Standby m	ode	No call in progress (slot cycle index=2)					
AT+CFUN=1	29	Normal mode; full functionality of the module					
AT+CFUN=4	27	Disabled TX and RX; modules is not registered on the network					
AT+CFUN=5	1.5(*2)	Full functionality with power saving; Module registered on the network can receive incoming call sand SMS					
Tx and Rx	mode	A call in progress					
Max Power Mode 750		CDMA 1x voice/data call					

^(*1)The off current is the total supply current from the main battery with the XO regulator ON, 19.2MHz XO ON and others are OFF.



TIP:

The electrical design for the power supply should be made ensuring it will be capable of a peak current output of at least 1A.

^(*2) Standby current consumption depends on network configuration or module configuration. The current consumption value for CFUN= 5 is measured under slot cycle index=2.



1vv0301010 Rev.11 - 2016-04-14

5.3. General Design Rules

The principal guidelines for the Power Supply Design embrace three different design steps:

- the electrical design
- the thermal design
- the PCB layout

5.3.1. Electrical Design Guidelines

The electrical design of the power supply depends strongly on the power source where this power is drained. We will distinguish them into three categories:

- +5V input (typically PC internal regulator output)
- +12V input (typically automotive)
- Battery


5.3.2. + 5V Input Source Power Supply Design Guidelines

- The desired output for the power supply is 3.8V, hence there is not a big difference between the input source and the desired output so a linear regulator can be used. A switching power supply will not be suitable because of the low drop-out requirements.
- When using a linear regulator, a proper heat sink must be provided in order to dissipate the power generated.
- A Bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks close to the CE910. A 100µF tantalum capacitor is usually suited.
- Make sure the low ESR capacitor on the power supply output (usually a tantalum one) is rated at least 10V.
- A protection diode must be inserted close to the power input in order to save the CE910 from power polarity inversion.



1vv0301010 Rev.11 - 2016-04-14

An example of a linear regulator with 5V input:

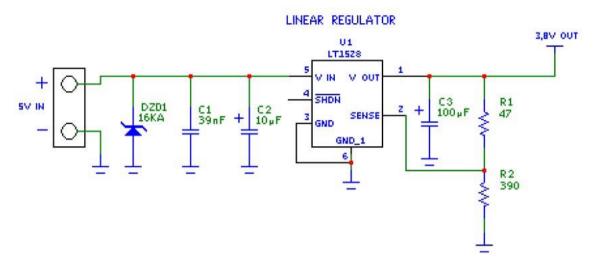


5.3.3. +12V Input Source Power Supply Design Guidelines

- The desired output for the power supply is 3.8V, hence due to the big difference between the input source and the desired output, a linear regulator is not suitable and must not be used. A switching power supply would be preferable because of its better efficiency, especially with the 1A peak current load represented by CE910.
- When using a switching regulator, a 500 kHz or more switching frequency regulator is preferable because of its smaller inductor size and its faster transient response. This allows the regulator to respond quickly to the current peaks absorption.
- In any case, the frequency and switching design selection is related to the application to be developed due to the fact the switching frequency could also generate EMC interferences.
- For car PB battery the input voltage can rise up to 15.8V and this must be kept in mind when choosing components: all components in the power supply must withstand this voltage.
- A bypass low ESR capacitor of adequate capacity must be provided in order to cut the current absorption peaks. A 100μF tantalum capacitor is usually suited for this.
- Make sure the low ESR capacitor on the power supply output (usually a tantalum one) is rated at least 10V.
- For car applications a spike protection diode must be inserted close to the power input in order to clean the supply from spikes.
- A protection diode must be inserted close to the power input in order to save the CE910 from power polarity inversion. This can be the same diode as for spike protection.



1vv0301010 Rev.11 - 2016-04-14

An example of switching regulator with 12V input is in the schematic below:

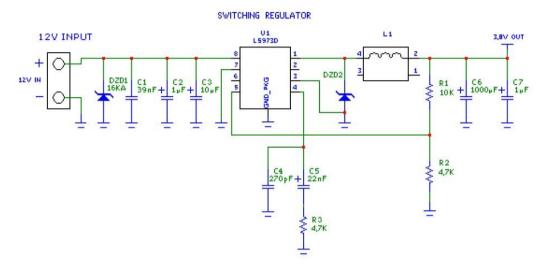

5.3.4. Battery Source Power Supply Design Guidelines

The desired nominal output for the power supply is 3.8V and the maximum voltage allowed is 4.2V. A single 3.7V lithium-ion cell battery type is ideal to supply power to the Telit CE910 module.



WARNING:

The three battery cells (Ni/Cd or Ni/MH 3.6V nom. battery types or 4V PB types) MUST NOT be used directly because their maximum voltage can rise over the absolute maximum voltage for the CE910 and cause damage. USE only Li-Ion battery types.

- A bypass low (usually a 200uF tantalum) ESR capacitor with adequate capacity must be provided in order to cut the current absorption peaks.
- Make sure the low ESR capacitor (usually a tantalum) is rated at least 10V.
- A protection diode must be inserted close to the power input in order to protect the CE910 module from power polarity inversions when connecting the battery.
- The battery capacity must be at least 500mAh in order to withstand the current peaks of 1A. The suggested battery capacity is from 500mAh to 1000mAh.

5.3.5. Thermal Design Guidelines

The thermal design for the power supply heat sink must be done with the following specifications:

Average current consumption during CDMA 1x @PWR level max: 750 mA



NOTE:

The average consumption during transmissions depends on the power level at which the device is requested to transmit via the network. The average current consumption hence varies significantly.



1vv0301010 Rev.11 - 2016-04-14

Considering the very low current during idle, especially if the Power Saving function is enabled, it is possible to consider from the thermal point of view that the device absorbs current significantly only during calls.

If we assume that the device stays in transmission for short periods of time (a few minutes) and then remains for quite a long time in idle (one hour), then the power supply always has time to cool down between the calls and the heat sink could be smaller than the calculated for 750mA maximum RMS current. There could even be a simple chip package (no heat sink).

Moreover in average network conditions the device is requested to transmit at a lower power level than the maximum and hence the current consumption will be less than 750 mA (usually around 300 mA).

For these reasons the thermal design is rarely a concern and the simple ground plane where the power supply chip is placed can be enough to ensure a good thermal condition and avoid overheating.

The heat generated by the CE910 must be taken into consideration during transmission at 24.5dBm max during calls. This generated heat will be mostly conducted to the ground plane under the CE910. The application must be able to dissipate heat.

In the CDMA 1x mode, since CE910 emits RF signals continuously during transmission, special attention must be paid to how to dissipate the heat generated.

The current consumption will be up to about 750mA in CDMA 1x continuously at the maximum TX output power (24.5dBm). Thus, you must arrange the area on the application PCB must be as large as possible under CE910.

The CE910 must be mounted on the large ground area of the application board and make many ground vias to dissipate the heat.

5.3.6. Power Supply PCB layout Guidelines

As seen in the electrical design guidelines, the power supply must have a low ESR capacitor on the output to cut the current peaks and a protection diode on the input to protect the supply from spikes and polarity inversion. The placement of these components is crucial for the correct operation of the circuitry. A misplaced component can be useless or can even decrease the power supply performance.

- The bypass low ESR capacitor must be placed close to the Telit CE910 power input pads, or if the power supply is a switching type, the capacitor can be placed close to the inductor to cut the ripple if the PCB trace from the capacitor to CE910 is wide enough to ensure a drop-less connection even during the 1A current peaks.
- The protection diode must be placed close to the input connector where the power source is drained.
- The PCB traces from the input connector to the power regulator IC must be wide enough to ensure no voltage drops occur when the 1A current peaks are absorbed. While a voltage drop of hundreds of mV may be acceptable from the power loss point of view, the same voltage drop may not be acceptable from the noise point of view. If the application does not have an audio interface but only uses the data feature of the Telit CE910, then this noise is not as disruptive and the power supply layout design can be more forgiving.





1vv0301010 Rev.11 - 2016-04-14

- The PCB traces to CE910 and the Bypass capacitor must be wide enough to ensure no significant voltage drops occur when the 1A current peaks are absorbed. This is a must for the same above-mentioned reasons. Try to keep this trace as short as possible.
- The PCB traces connecting the switching output to the inductor and the switching diode must be kept as short as possible by placing the inductor and the diode very close to the power switching IC (only for switching power supply). This is done in order to reduce the radiated field (noise) at the switching frequency (usually 100-500 kHz).
- The use of a good common ground plane is suggested.
- The placement of the power supply on the board must be done in a way to guarantee that the high current return paths in the ground plane are not overlapped with any noise sensitive circuitry such as the microphone amplifier/buffer or earphone amplifier.

The power supply input cables must be kept separate from noise sensitive lines such as microphone/earphone cables.



1vv0301010 Rev.11 - 2016-04-14

6. Antenna

The antenna connection and board layout design are the most important parts in the full product design and they strongly reflect on the product's overall performance. Read carefully and follow the requirements and the guidelines for a proper design.

6.1. CDMA Antenna Requirements

The antenna for a Telit CE910 device must fulfill the following requirements:

	CE910 Specifications					
	Depending on the frequency band(s) provided by the					
Frequency range	network operator, the customer must use the most suitable					
	antenna for that/those band(s)					
	70 MHz in CDMA BC0					
Bandwidth	53 MHz in CDMA BC10					
	140 MHz in CDMA BC1					
~ .	Gain < 5.12dBi in CDMA BC0					
Gain	Gain < 5.12dBi in CDMA BC10					
	Gain < 6.12dBi in CDMA BC1					
Impedance	50 Ohm					
Input power	> 24.5dBm Average Power in CDMA					
VSWR absolute max	≤ 5:1 (Limit to avoid permanent damage)					
VSWR recommended	\leq 2:1 (Limit to fulfill all regulatory requirement)					

When using the Telit CE910, since there's no antenna connector on the module, the antenna must be connected to the CE910 antenna pad (K1) by means of a transmission line implemented in the PCB.

In the case that the antenna is not directly connected at the antenna pad of the CE910, then a PCB line is required. This transmission line shall fulfill the following requirements:

Antenna Line on PCB Requirements				
Characteristic Impedance	50Ohm			
Max Attenuation	0.3dB			
Coupling with other signals shall be avoided				
Cold End (Ground Plane) of anto	enna shall be equipotential to the CE910 ground pads			

Furthermore if the device is developed for the US and/or Canada market, it must comply with the FCC and/or IC approval requirements:

This device is to be used only for mobile and fixed application. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and





1vv0301010 Rev.11 - 2016-04-14

must not be co-located or operating in conjunction with any other antenna or transmitter. End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance. OEM integrators must ensure that the end user has no manual instructions to remove or install the CE910 module. Antennas used for this OEM module must not exceed 5dBi gain for mobile and fixed operating configurations.

6.2. CDMA antenna - PCB line Guidelines

- Make sure that the transmission line's characteristic impedance is 50ohm.
- Keep line on the PCB as short as possible since the antenna line loss shall be less than around 0.3dB.
- Line geometry should have uniform characteristics, constant cross section, avoid meanders and abrupt curves.
- Any kind of suitable geometry/structure can be used for implementing the printed transmission line afferent the antenna.
- If a Ground plane is required in line geometry, that plane has to be continuous and sufficiently extended so the geometry can be as similar as possible to the related canonical model.
- Keep, if possible, at least one layer of the PCB used only for the Ground plane; If possible, use this layer as reference Ground plane for the transmission line.
- It is wise to surround (on both sides) the PCB transmission line with Ground. Avoid having other signal tracks facing directly the antenna line track.
- Avoid crossing any un-shielded transmission line footprint with other tracks on different layers.
- The Ground surrounding the antenna line on PCB has to be strictly connected to the main Ground plane by means of via holes (once per 2mm at least) placed close to the ground edges facing line track.
- Place EM noisy devices as far as possible from CE910 antenna line.
- Keep the antenna line far away from the CE910 power supply lines.
- If EM noisy devices are present on the PCB hosting the CE910, such as fast switching ICs, take care of shielding them with a metal frame cover.
- If EM noisy devices are not present around the line use of geometries like Micro strip or Grounded Coplanar Waveguide are preferred since they typically ensure less attenuation when compared to a Strip line having same length.

6.3. CDMA Antenna installation Guidelines

- Install the antenna in a place covered by the CDMA signal.
- If the device antenna in the application is located greater then 20cm from the human body and there are no co-located transmitters then the Telit FCC/IC approvals can be re-used by the end product.
- Antenna shall not be installed inside metal cases.
- Antenna shall be installed also according to antenna manufacture instructions.



WARNING:

Consider a mechanical design and a low-capacitance ESD protection device to protect CE910 or customer specific requirements from ESD event to Antenna port (K1).





1vv0301010 Rev.11 - 2016-04-14

7. USB Port

The CE910 module includes a Universal Serial Bus (USB) transceiver, which operates at USB Full-speed (12Mbits/sec) and slave mode only.

It is compliant with the USB 2.0 specification and can be used for diagnostic monitoring, control and data transfers.

The table below describes the USB interface signals:

Pin	Signal	I/O	Function	Type
B15	USB_D+	I/O	USB differential Data(+)	
C15	USB_D-	I/O	USB differential Data(-)	
A13	VUSB	I	Power for the internal USB transceiver	5V

The USB_DPLUS and USB_DMINUS signals have a clock rate of 60MHz. The signal traces should be routed carefully. Trace lengths, number of vias and capacitive loading should be minimized. The impedance value should be as close as possible to 100 Ohms differential.

The table below describes the VUSB specification:

Parameter	Min	Max
Input voltage	4.4V	5.0V
Input current	50mA	-



WARNING:

Consider a mechanical design and a low-capacitance ESD protection device to protect CE910 or customer specific requirements from ESD event to USB lines (B15, C15 and A13).



1vv0301010 Rev.11 - 2016-04-14

8. Serial Port

The serial ports on the Telit CE910 are the interface between the module and OEM hardware.

2 serial ports are available on the module:

- Modem Serial Port 1 (Main)
- Modem Serial Port 2 (Auxiliary)

Several configurations can be designed for the serial port on the OEM hardware.

The most common are:

- RS232 PC comport
- Microcontroller UART@1.8V(Universal Asynchronous Receiver Transmit)
- Microcontroller UART@5V or other voltages different from 1.8V

Depending on the type of serial port on the OEM hardware, a level translator circuit may be needed to make the system work.

On the CE910 the ports are CMOS 1.8V.

The electrical characteristics of the serial port are explained in the following tables:

Absolute Maximum Ratings -Not Functional

Parameter	Min	Max
Input level on non-power pin with respect to ground	-0.3	+2.3V

Operating Range - Interface levels (1.8V CMOS)

Parameter	Min	Max
Input high level	1.5V	2.1 V
Input low level	0V	0.35V
Output high level	1.35V	1.8V
Output low level	0V	0.45V



1vv0301010 Rev.11 - 2016-04-14

8.1. Modem Serial Port 1

The serial port 1 on the CE910 is a +1.8V UART with all 7 RS232 signals.

It differs from the PC-RS232 in the signal polarity (RS232 is reversed) and levels.

RS232 Pin #	Signal	CE910 Pad No.	Function	Usage	
1	C109/DCD	N14	Data Carrier Detect	Output from the CE910 that indicates the carrier presence	
2	C104/RXD	M15	Transmit line *see Note	Output transmit line of the CE910 UART	
3	C103/TXD	N15	Receive line *see Note	Input receive of the CE910 UART	
4	C108/DTR	M14	Data Terminal Ready	Input to the CE910 that controls the DTE READY condition	
5	GND	-	-	GND	
6	C107/DSR	P14	Data Set Ready	Output from the CE910 that indicates the module is ready	
7	C106/CTS	P15	Clear to Send	Output from the CE910 that controls the hardware flow control	
8	C105/RTS	L14	Request to Send	Input to the CE910 that controls the hardware flow control	
9	C125/RI	R14	Ring Indicator	Output from the CE910 that indicates the incoming call condition	

The following table shows the typical value (pulled inside the baseband chipset) and status for input lines in all module states:

Signal/State	OFF	RESET	ON	Powersaving	PU tied to
TXD	unknown	Pull Down (21K~210K)			
RTS		Pull Down (21K~210K)	Pull Up (39K~390K)	Pull Up (39K~390K)	1.8V
DTR		Pull Up (39K~390K)			



NOTE:

According to V.24, RX/TX signal names are referred to the application side. Therefore, on the CE910 side these signals are on the opposite direction:

TXD on the application side will be connected to the receive line (here named C103/TXD)

RXD in the application side will be connected to the transmit line (here named C104/RXD)





1vv0301010 Rev.11 - 2016-04-14



NOTE:

For minimum implementation, only the TXD and RXD lines must be connected, the other lines can be left open provided a software flow control is implemented.



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the CE910 when the module is powered off or during an ON/OFF transition.



NOTE:

High-speed UART supports up to 4Mbps. Please refer to the AT command User Guide in detail.



NOTE:

RTS pin should be connected to the GND (on the module side) if flow control is not used.



WARNING:

Consider a mechanical design and a low-capacitance ESD protection device to protect CE910 or customer specific requirements from ESD event to UART port (M15, N15, P15 and L14).



1vv0301010 Rev.11 - 2016-04-14

8.2. Modem Serial Port 2

The secondary serial port on the CE910 is a CMOS 1.8V with only RX and TX signals.

The signals of the CE910 serial port are:

PAD	Signal	I/O	Function	Type
D15	TX_AUX	0	Auxiliary UART (TX data to DTE)	CMOS 1.8V
E15	RX AUX	I	Auxiliary UART (RX data from DTE)	CMOS 1.8V



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the CE910 when the module is powered off or during an ON/OFF transition.



1vv0301010 Rev.11 - 2016-04-14

8.3. RS232 Level Translation

In order to interface the Telit CE910 with a PC com port or a RS232 (EIA/TIA-232) application, a level translator is required. This level translator must:


- Invert the electrical signal in both directions
- Change the level from 0/1.8V to +/-15V

Actually, the RS232 UART 16450, 16550, 16650 & 16750 chipsets accept signals with lower levels on the RS232 side (EIA/TIA-562), allowing a lower voltage-multiplying ratio on the level translator. Note that the negative signal voltage must be less than 0V and hence some sort of level translation is always required. The simplest way to translate the levels and invert the signal is by using a single chip level translator. There is a multitude of them, differing in the number of drivers and receivers and in the levels (be sure to get a true RS232 level translator not a RS485 or other standards). By convention the driver is the level translator from the 0-1.8V UART to the RS232 level. The receiver is the translator from the RS232 level to 0-1.8V UART.


In order to translate the whole set of control lines of the UART you will need:

- 5 drivers
- 3 receivers

An example of RS232 level adaption circuitry could be accomplished using a MAXIM transceiver (MAX218). In this case the chipset is capable of translating directly from 1.8V to the RS232 levels (Example on 4 signals only).

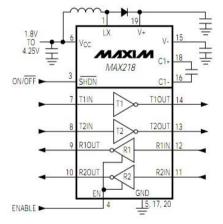

The RS232 serial port lines are usually connected to a DB9 connector with the following layout:

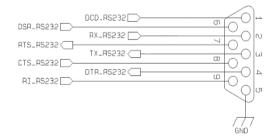



1vv0301010 Rev.11 - 2016-04-14

9. Audio Section Overview

The CE910 provides an analog audio interface and digital audio interface.

9.1. Analog Audio Interface (AVI)


The CE910 provides an analog audio interface; one differential input for audio to be transmitted (Uplink) and a balanced output for audio to be received (Downlink).

The bias for the microphone has to be as clean as possible; the first connection (single ended) is preferable since the Vmic noise and ground noise are fed into the input as common mode and then rejected. This sounds strange; usually the connection to use in order to reject the common mode is the balanced one. In this situation we have to recall that the microphone is a sound to current transducer, so the resistor is the current to tension transducer, so finally the resistor feeds the input in balanced way even if the configuration, from a microphone point of view, seems to be un-balanced.




1vv0301010 Rev.11 - 2016-04-14

9.1.1. MIC Connection

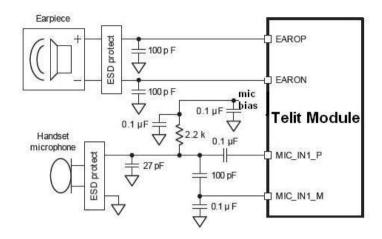

Single-ended microphone connection

If a "balanced way" is anyway desired, much more care has to be taken to VMIC noise and ground noise.

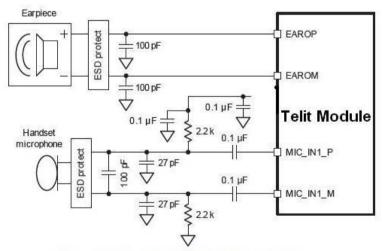

Differential microphone connection




TIP: Since the J-FET transistor inside the microphone acts as RF-detector-amplifier, ask vendor for a microphone with anti-EMI capacitor (usually a 33pF or a 10pF capacitor placed across the output terminals inside the case).






1vv0301010 Rev.11 - 2016-04-14

9.1.2. LIN-IN Connection

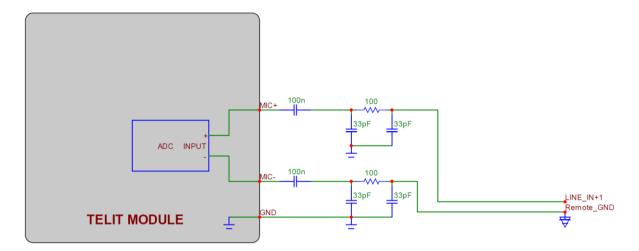

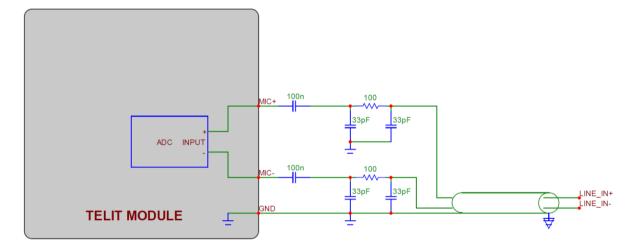


If the audio source is not a mike but a different device, the following connections can be done. Place 100nF capacitor in series with both inputs, so the DC current is blocked. Place the 33pF-100Ohm-33pF RF-filter, in order to prevent some EMI field to get into the high impedance high gain MIC inputs. Since the input is differential, the common mode voltage noise between the two (different) grounds is rejected, provided that both AF_IN+ & AF_IN- are connected directly onto the source.



1vv0301010 Rev.11 - 2016-04-14

9.1.3. EAR Connection

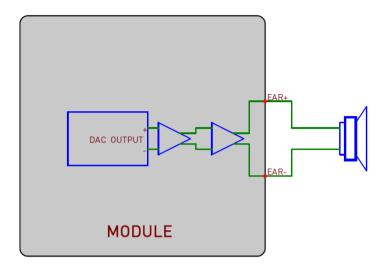

The audio output of the CE910 is balanced, this is helpful to double the level and to reject common mode (click and pop are common mode and therefore rejected). These outputs can drive directly a small loudspeaker with electrical impedance not lower than 320hm.



TIP: in order to get the maximum audio level at a given output voltage level (dBspl/Vrms), the following breaking through procedure can be used. Have the loudspeaker as close as you can to the listener (this simplify also the echo cancelling); choose the loudspeaker with the higher sensitivity (dBspl per W); choose loudspeakers with the impedance close to the limit in order to feed more power inside the transducer (it increases the W/Vrms ratio). If this were not enough, an external amplifier should be used.



1vv0301010 Rev.11 - 2016-04-14

9.2. Digital Voice Interface (DVI)

The product is providing one Digital Audio Interface (DVI) on the following Pins:

Pin	Signal	I/O	Function	Туре
В9	DVI_WA0	I/O	Digital Voice interface (WA0)	
В6	DVI_RX	I	Digital Voice interface (RX)	1 017
B7	DVI_TX	О	Digital Voice interface (TX)	1.8V
B8	DVI_CLK	I/O	Digital Voice interface (CLK)	

9.2.1. CODEC Example

Please refer to the Digital Voice Interface Application note, 80000NT10101A



1vv0301010 Rev.11 - 2016-04-14

10. General Purpose I/O

The CE910 module is provided by a set of Digital Input / Output pins

Input pads can only be read; they report the digital value (high or low) present on the pad at the read time.

Output pads can only be written or queried and set the value of the pad output.

An alternate function pad is internally controlled by the CE910 firmware and acts depending on the function implemented.

The following GPIOs are available on the CE910:

Pin	Signal	I/O	Function	Туре	Default State	Note
C8	GPIO_01	I/O	Configurable GPIO	CMOS 1.8V	INPUT	Alternate function STAT_LED
C9	GPIO_02	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
C10	GPIO_03	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
C11	GPIO_04	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
B14	GPIO_05	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
C12	GPIO_06	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
C13	GPIO_07	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
K15	GPIO_08	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
L15	GPIO_09	I/O	Configurable GPIO	CMOS 1.8V	INPUT	
G15	GPIO_10	I/O	Configurable GPIO	CMOS 1.8V	INPUT	



1vv0301010 Rev.11 - 2016-04-14

10.1. Logic Level Specification

Where not specifically stated, all the interface circuits work at 1.8V CMOS logic levels.

The following table shows the logic level specifications used in the CE910 interface circuits:

Absolute Maximum Ratings -Not Functional

Parameter	Min	Max
Input level on any digital pin (CMOS 1.8) with respect to ground	-0.3V	2.3V

Operating Range - Interface levels (1.8V CMOS)

Parameter	Min	Max
Input high level	1.5V	2.1V
Input low level	0.0V	0.35V
Output high level	1.35V	1.8V
Output low level	0.0V	0.45V

Current characteristics

Parameter	Typical
Output Current	2mA
Input Current	30uA

10.2. Using a GPIO Pad as Input

The GPIO pads, when used as inputs, can be connected to a digital output of another device and report its status, provided this device has interface levels compatible with the 1.8V CMOS levels of the GPIO.

If the digital output of the device to be connected with the GPIO input pad has interface levels different from the 1.8V CMOS, then it can be buffered with an open collector transistor with a $47K\Omega$ pull-up resistor to 1.8V.



NOTE:

In order to avoid a back powering effect it is recommended to avoid having any HIGH logic level signal applied to the digital pins of the module when it is powered OFF or during an ON/OFF transition.





1vv0301010 Rev.11 - 2016-04-14

10.3. Using a GPIO Pad as Output


The GPIO pads, when used as outputs, can drive 1.8V CMOS digital devices or compatible hardware. When set as outputs, the pads have a push-pull output and therefore the pull-up resistor may be omitted.

10.4. Indication of Network Service Availability

The STAT_LED pin status shows information on the network service availability and Call status. In the CE910 modules, the STAT_LED usually needs an external transistor to drive an external LED. Because of the above, the status indicated in the following table is reversed with respect to the pin status:

LED status	Device Status
Permanently off	Device off
Fast blinking (Period 1s, Ton 0,5s)	Net search / Not registered / turning off
Slow blinking (Period 3s, Ton 0,3s)	Registered full service
Permanently on	a call is active

A schematic example could be:

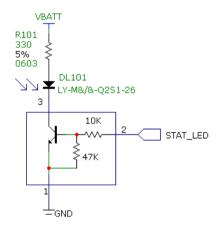



1vv0301010 Rev.11 - 2016-04-14

10.5. RTC Bypass Output

The VRTC pin brings out the Real Time Clock supply but it is NOT separate from the rest of the digital part. So unlike other Telit's products, CE910 series cannot support RTC function if VBATT is not supplied. In this reason xE910 RTC Backup Application Note is NOT valid for CE910.

In summary in order to use RTC function with CE910, VBATT must be supplied from the application.

VRTC also supplies reference power to help CE910 check the time from SMPL (Sudden Momentary Power Loss).

So it is recommended as best practice to connect VRTC to a shunt capacitor (VRTC to GND) and the acceptable capacitor value is:

Parameter	Min
Keep-alive capacitor on Pad no. = C14	6.8uF



NOTE:

VBATT must be supplied in order to use RTC function.



NOTE:

It is recommended to add a keep-alive capacitor on VRTC.



WARNING:

NO devices must be powered from this pin.

10.6. VAUX/PWRMON Power Output

A regulated power supply output is provided in order to supply small devices from the module. This output is active when the module is ON and goes OFF when the module is shut down. The operating range characteristics of the supply are:

Operating Range - VAUX/PWRMON power supply

Parameter	Min	Typical	Max
Output voltage	1.77V	1.8V	1.83V
Output current			200mA





CE910 Family Hardware User Guide 1vv0301010 Rev.11 - 2016-04-14

Output bypass capacitor (Inside the module)	2.2μF	
(mside the module)		



1vv0301010 Rev.11 - 2016-04-14

11. ADC section

11.1. Description

The on board ADC is 12-bit converter. It is able to read a voltage level in the range of $0 \sim 1.2$ volts applied on the ADC pin input and store and convert it into 12 bit word.

Parameter	Min	Max	Units
Input Voltage range	0	1.2	Volt
AD conversion	-	12	bits
Resolution	-	< 1	mV
Input Resistance	1		Mohm

The CE910 provides one Analog to Digital Converter.

The input line is named as ADC_IN1 and it is available on pad B1.

11.2. Using ADC Converter

An AT command is available to use the ADC function.

The command is AT#ADC=1,2. The read value is expressed in mV

Refer to SW User Guide or AT Commands Reference Guide for the full description of this function.



WARNING:

The ADC value read by AT command may present a certain level when it's open (not loaded). It is not an actual error and the ADC value is valid only if any input is asserted to ADC_IN1



1vv0301010 Rev.11 - 2016-04-14

12. Test Point

These pins are needed in order to analyze CE910 on the application board.

The signals of the CE910 are:

PAD	Signal	I/O	Function	Type
C3	TP1		Test Point	TP
C4	TP2		Test Point	TP
C5	TP3		Test Point	TP
C6	TP4		Test Point	TP
C7	TP5		Test Point	TP
D3	TP6		Test Point	TP
E3	TP7		Test Point	TP



1vv0301010 Rev.11 - 2016-04-14

13. Mounting CE910 on the Application

13.1. General

The CE910 has been designed in order to be compliant with a standard lead-free SMT process.

13.2. Module Finishing & Dimensions


The CE910 overall dimensions are:


• Length: 28.2 mm


• Width: 28.2 mm

• Thickness: 2.05 mm

• Weight: 4.7 g

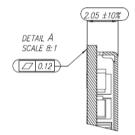

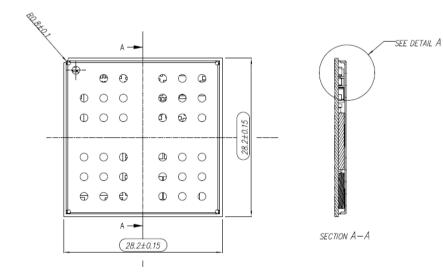

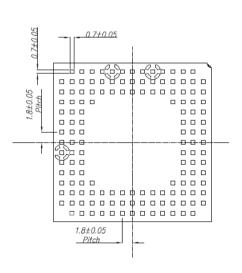

Top view

Bottom view


(Dimensions in mm)





1vv0301010 Rev.11 - 2016-04-14

13.3. Recommended foot print for the application

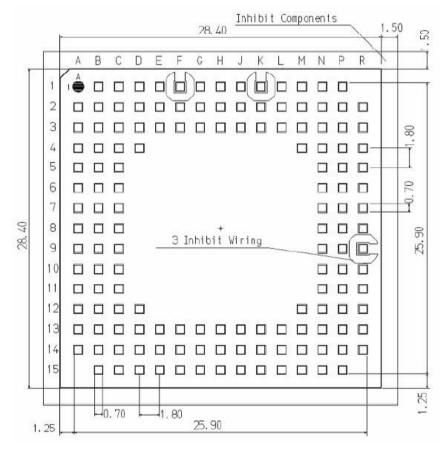

144 pins

< Top View >

In order to easily rework the CE910 it is suggested to consider having a 1.5 mm placement inhibit area around the module on the application.

It is also suggested, as a common rule for an SMT component, to avoid having a mechanical part of the application in direct contact with the module.



NOTE:

In the customer application, the region under WIRING INHIBIT (see figure) must be clear from signal or ground paths.




1vv0301010 Rev.11 - 2016-04-14

13.4. Stencil

Stencil's apertures layout can be the same as the recommended footprint (1:1). A suggested thickness of stencil foil $\geq 120 \,\mu m$.


13.5. PCB Pad Design

Non solder mask defined (NSMD) type is recommended for the solder pads on the PCB.



13.6. Recommendations for PCB Pad Dimensions (mm)


The recommendation for the PCB pads dimensions are described in the following image(dimensions in mm)

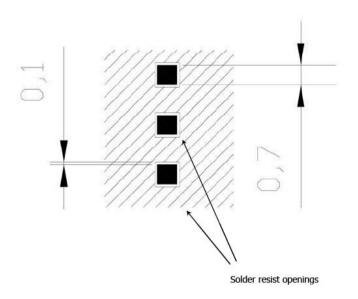

It is not recommended to place via or micro-via not covered by solder resist in an area of 0.3 mm around the pads unless it carries the same signal as the pad itself (see following figure).



1vv0301010 Rev.11 - 2016-04-14

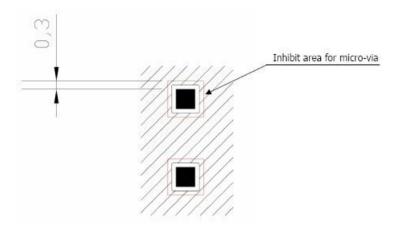

Holes in pad are allowed only for blind holes and not for through holes.

Recommendations for PCB Pad Surfaces:

Finish	Layer thickness (um)	Properties
Electro-less Ni / Immersion Au	1 3~//005~015	good solder ability protection, high shear force values

The PCB must be able to resist the higher temperatures which are occurring at the lead-free process. This issue should be discussed with the PCB-supplier. Generally, the wettability of tin-lead solder paste on the described surface plating is better compared to lead-free solder paste.



1vv0301010 Rev.11 - 2016-04-14


13.7. Solder Paste

	Lead free
Solder Paste	Sn/Ag/Cu

We recommend using only "no clean" solder paste in order to avoid the cleaning of the modules after assembly.

13.7.1. Solder Reflow

The following is the recommended solder reflow profile:

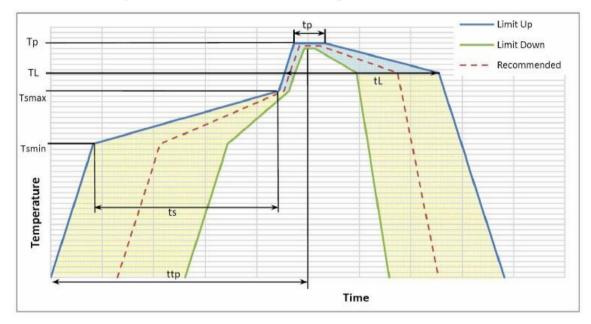

Profile Feature	Pb-Free Assembly
Average ramp-up rate (T _L to T _P)	3°C/second max
Preheat - Temperature Min (Tsmin) - Temperature Max (Tsmax) - Time (min to max) (ts)	150°C 200°C 60 ~ 180 seconds
Tsmax to TL - Ramp-up Rate	3°C/second max
Time maintained above: - Temperature (TL) - Time (tL)	217°C 60 ~150 seconds



1vv0301010 Rev.11 - 2016-04-14

Profile Feature	Pb-Free Assembly
Peak Temperature (T _P)	245 +0/-5°C
Time within $5^{\circ}\mathbb{C}$ of actual Peak Temperature (t_P)	10 ~30 seconds
Ramp-down Rate	6 °C/sec max
Time 25℃ to Peak Temperature	8 minutes max



NOTE:

All temperatures refer to topside of the package, measured on the package body surface.



WARNING:

The CE910 module withstands one reflow process only.






1vv0301010 Rev.11 - 2016-04-14

14. Packing System

14.1. Tray


The CE910 modules are packaged on trays of 36 pieces each. These trays can be used in SMT processes for pick & place handling.

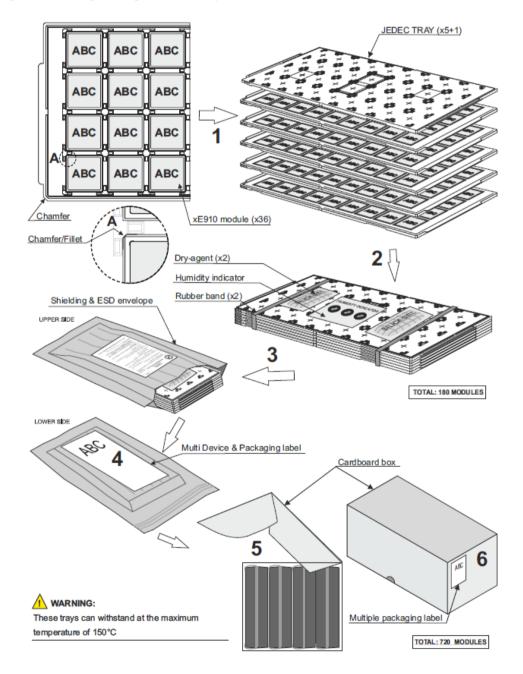





1vv0301010 Rev.11 - 2016-04-14

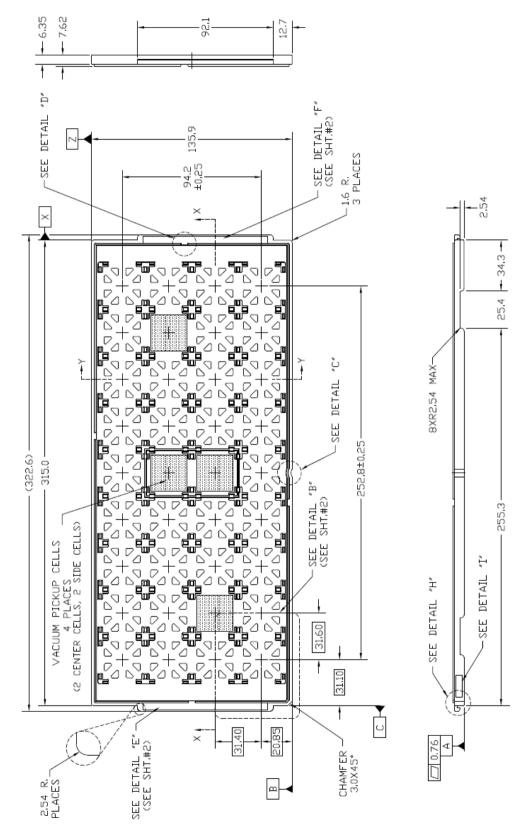




1vv0301010 Rev.11 - 2016-04-14


14.2. Reel

The CE910 can be packaged on reels of 200 pieces each.

See figure for module positioning into the carrier.

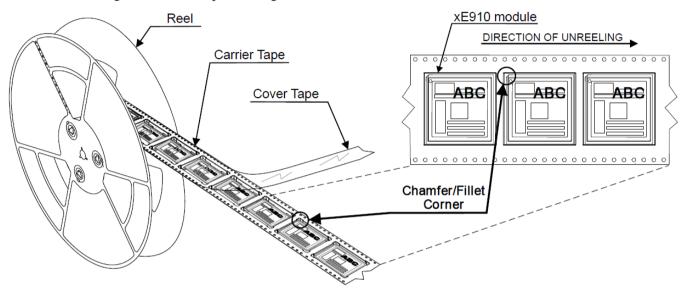


14.2.1. Carrier Tape Detail

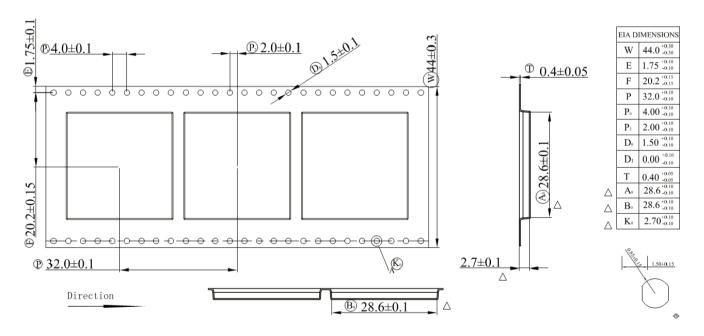




CE910 Family Hardware User Guide 1vv0301010 Rev.11 - 2016-04-14

14.2.2. Reel Detail

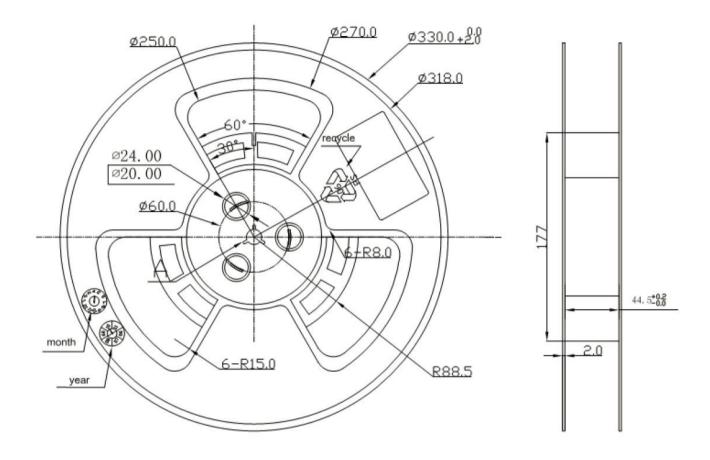


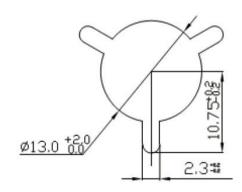



1vv0301010 Rev.11 - 2016-04-14

14.2.3. Packaging Detail

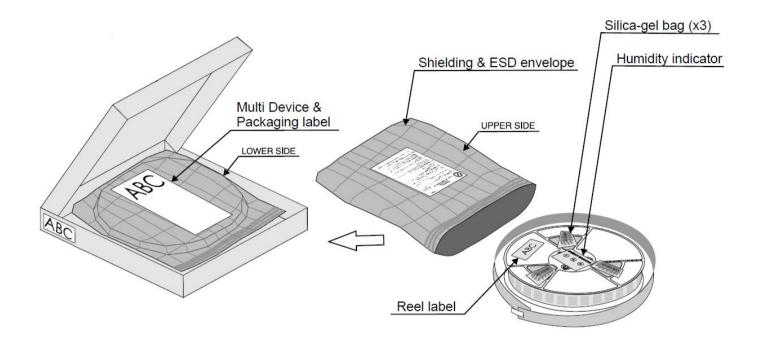

14.3. Moisture Sensibility

The CE910 is a Moisture Sensitive Device level 3, in accordance with standard IPC/JEDEC J-STD-020, take care all the relative requirements for using this kind of components.

Moreover, the customer has to take care of the following conditions:

- a) Calculated shelf life in sealed bag: 12 months at < 40 °C and 90% relative humidity (RH).
- b) Environmental condition during the production: $30\,^{\circ}\text{C}$ / 60% RH according to IPC/JEDEC J-STD-033A paragraph 5.
- c) The maximum time between the opening of the sealed bag and the reflow process must be 168hours if condition b) "IPC/JEDEC J-STD-033A paragraph 5.2" is respected
- d) Baking is required if conditions b) or c) are not respected
- e) Baking is required if the humidity indicator inside the bag indicates 10% RH or more



1vv0301010 Rev.11 - 2016-04-14

15. Application Design Guide

15.1. Download and Debug Port

One of the following options should be chosen in the design of host system in order to download or upgrade the Telit's software and debug CE910 when CE910 is already mounted on a host system.

CASE I:

Users who use both of UART and USB interfaces to communicate with CE910

- Must implement a download method in a host system for upgrading CE910 when it's mounted.

CASE II:

Users who use USB interface only to communicate with CE910

- Must arrange UART port in a host system for debugging or upgrading CE910 when it's mounted.

CASE III:

Users who use UART interface only to communicate with CE910

- Must arrange USB port in a host system for debugging or upgrading CE910 when it's mounted.



1vv0301010 Rev.11 - 2016-04-14

16. Conformity Assessment Issues (Problèmes d'évaluation de conformité)

The CE910 is FCC/IC Approved as module to be installed in other devices. This device should be used only for fixed and mobile applications and if the final product after integration is intended for portable use, a new application and FCC is required.

Le CE910 est approuvé FCC/IC comme module à installer dans d'autres dispositifs. Ce dispositif doit être utilisé uniquement pour des applications fixes et mobiles et si le produit fini est prévu après intégration pour un usage portatif, une nouvelle application et la FCC est requise

The user is cautioned that this device should be used only as specified within this manual to meet RF exposure requirements.

L'utilisateur est averti que ce dispositif doit être utilisé uniquement comme spécifié dans ce manuel pour répondre aux normes d'exposition aux ondes rf.

Use of this device in a manner inconsistent with this manual could lead to excessive RF exposure conditions.

L'utilisation de ce dispositif en quelque sorte contradictoire avec ce manuel a pu mener aux états excessifs d'exposition de rf.

The CE910 is conforming to the following US Directives:

- Use of RF Spectrum. Standards: FCC47 Part 22&24
- EMC Standards: FCC47 Part 15

Le CE910 est conforme aux directives suivantes des USA

- Utilisation de spectre de rf. Normes : FCC47 partie 22&24
- Normes d'EMC : FCC47 partie 15

This device complies with Part 15 of the FCC Rules and complies with industry Canada license-exempt RSS standard(s)

Ce dispositif est conforme à la partie 15 des règles FCC et est conforme avec l'industrie au Canada exempts de licence standard RSS (s)

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le fonctionnement est sujet aux deux conditions suivantes :

(1) ce dispositif peut ne pas causer l'interférence nocive, et





1vv0301010 Rev.11 - 2016-04-14

(2) ce dispositif doit accepter aucune interférence, y compris un interférence qui pourrait causer le fonctionnement non désiré du dispositif.

The user must refer to below information to meet the FCC/IC's RF exposure rules and regulations when they design:

Lors de la conception, l'utilisateur doit se référer à l'information ci-dessous pour remplir les conditions et règlementations FCC/IC' d'exposition aux ondes RF:

- The system antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all the persons and must not be co-located or operating in conjunction with any other antenna or transmitter.
 Le système d'antenne utilisé pour cet émetteur doit être installé à une distance d'au moins de 20 cm de toute personne et ne doit pas être co-implanté ou opérer en même temps que n'importe quelle autre antenne ou émetteur.
- The system antenna(s) used for this module must not exceed 5.12dBi in CDMA BC0, CDMA BC10 and 6.12dBi in CDMA BC1 for mobile and fixed or mobile operating configurations. Le système d'antenne utilisé pour ce module ne doit pas dépasser 5.12dBi en CDMA BC0, CDMA BC10 et 6.12dBi en CDMA BC1 pour des configurations mobiles et fixes ou des configurations opérant en mode mobile.
- Users and installers must be provided with antenna installation instructions and transmitter
 operating conditions for satisfying RF exposure compliance.

 Manufacturers of mobile, fixed or portable devices incorporating this module are advised to
 clarify any regulatory questions and to have their complete product tested and approved for
 FCC compliance.
 Les instructions d'installation de l'antenne ainsi que les conditions de fonctionnement de
 - l'émetteur doivent être remis aux utilisateurs et aux installateurs conformément à la règlementation sur l'exposition aux ondes rf. Des fabricants des dispositifs mobiles, fixes ou portables incorporant ce module sont invités à clarifier toutes les questions de normalisation et à avoir leur produit complètement testé pour la mise en conformité FCC.
- CE910 is intended for the OEM integrator only. CE910 est prévu pour l'intégrateur OEM seulement.
- The user is required to see the Grant of Equipment document for other restrictions.

 L'utilisateur doit se referrer au document « Grant of equipment » pour d'autres restrictions.
- CE910 must be operated and used with a locally approved access point.
 CE910 doit être actionné et utilisé avec un point d'accès localement approuvé.
- The radio transmitters (CE910-DUAL IC ID: 5131A-CE910DUAL & CE910B-DUAL IC ID: 5131A-CE910BDUAL) have been approved by Industry Canada to operate with the antenna type listed in this manual with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a



1vv0301010 Rev.11 - 2016-04-14

gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Les 'émetteurs radio (CE910-DUAL identification d'IC : 5131A-CE910DUAL & CE910B-DUAL identification d'IC : 5131A-CE910BDUAL) a été approuvé par Industry Canada pour fonctionner avec le type d'antenne énuméré dans ce manuel avec le gain autorisé maximum et l'impédance d'antenne exigée pour chaque type d'antenne indiqué. Les types d'antenne non inclus dans cette liste, ayant un gain supérieur au gain maximum indiqué pour ce type, sont strictement interdits pour un usage avec ce dispositif.

The following regulatory and safety notices must be published in documentation supplied to the end user of the product or system incorporating an adapter in compliance with local regulations.

 Host system including CE910 must be labeled with "Contains transmitter module with CE910-DUAL FCC ID: RI7CE910-DUAL and IC ID: 5131A-CE910DUAL CE910B-DUAL FCC ID: RI7CE910B-DUAL and IC ID: 5131A-CE910BDUAL"

Les notices de normalisation et de sécurité doivent se trouver dans la documentation fournie à l'utilisateur du produit ou du système incorporant un adaptateur conforme aux règlementations locales.

Le système hôte comprenant CE910 doit être marqué avec « Contient un module émetteur avec

CE910-DUAL IDENTIFICATION FCC : RI7CE910-DUAL et identification IC : 5131A-CE910DUAL

CE910B-DUAL IDENTIFICATION FCC : RI7CE910B-DUAL et identification IC : 5131A-CE910BDUAL »



NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - •Consult the dealer or an experienced radio/TV technician for help.





1vv0301010 Rev.11 - 2016-04-14



WARNING:

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



1vv0301010 Rev.11 - 2016-04-14

17. Safety Recommendations

READ CAREFULLY

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and has to be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, aircrafts, etc.
- Where there is risk of explosion such as gasoline stations, oil refineries, etc. It is the
 responsibility of the user to enforce the country's regulations and the specific environmental
 regulation.

Do not disassemble the product; any evidence of tampering will compromise the warranty validity. Follow the instructions of the hardware user guides for a correct wiring of the product. The product has to be supplied with a stabilized voltage source and the wiring has to conform to the security and fire prevention regulations. The product has to be handled with care, avoiding any contact with the pads because electrostatic discharges may damage the product itself.

The system integrator is responsible for the functioning of the final product; therefore, care has to be taken with the external components of the module as well as of any project or installation issue because of the risk of disturbing the CDMA network or external devices or having impact on security. Should there be any doubt, please refer to the technical documentation and the regulations in force. Every module has to be equipped with a proper antenna with specific characteristics. The antenna has to be installed with care in order to avoid any interference with other electronic devices and has to guarantee a minimum distance from the body (20 cm). In case this requirement cannot be satisfied, the system integrator has to assess the final product against SAR regulations.



CE910 Family Hardware User Guide 1vv0301010 Rev.11 - 2016-04-14

18. Document History

Revision	Date	Changes
0	2012-07-12	Initial release for MKT sample
1	2012-08-06	8.1 Modem Serial Port1: added input resistances for input lines
		10.5 RTC Bypass Output : updated application information
2	2012-12-20	2.2 Product Specifications updated : Device dimensions
		3.1 Pin-out : Auxiliary UART and RUIM IF added,
		LGA Pads Layout updated
		4.2 Turning off the CE910 updated
		4.4 Hardware Unconditional Shutdown updated
		5.1 Power Supply Requirement updated
		7 USB Port updated
		8 Serial Port updated
		12.2 Module Finishing & Dimensions updated
		13. Packing System updated
		13.1 Moisture Sensibility updated
		14. Application Design Guide updated
3	2013-04-08	5.1 Power Supply Requirement updated : added the extended
		operating voltage range
		8.1 Modem Serial Port updated
		9. Audio section overview updated
		Added information for CE910-SC
		14. Application Design Guide updated
4	2013-04-16	12.4 Stencil updated
5	2013-06-03	2.2 Product Specifications
		- Storage and Operating Temperature Range updated
6	2013-12-12	2.2 Product Specification update
		9.1.1 MIC Connection update.
		10.5 RTC Bypass Output: updated application information
		12.7 Solder reflow information updated
		15 Conformity Assessment Issues updated
7	2014-08-13	2.2 Product Specification update :Device weight
		4.1 Turning on the CE910 updated
		4.2 Turning off the CE910 updated
		4.4 Hardware Unconditional Shutdown updated
		5.2 Power consumption updated
		11. ADC section updated
8	2014-11-10	3.1 Pin Out updated
		10.5 RTC Bypass output updated
		12. Test Point updated
		12.2 Module Finishing & Dimensions
9	2015-02-09	3.1 Pin Out updated
10	2015-05-15	8.1 Modem Serial Port updated





CE910 Family Hardware User Guide 1vv0301010 Rev.11 - 2016-04-14

		T
11	2016-04-14	Added CE910B-DUAL PRODUCT
		2.2 Product Specifications updated
		3.1.1 LGA Pads Layout updated
		4.4 Hardware unconditional Shutdown updated
		4.5 Fast Power down updated
		5.2 Power consumption updated
		6.1 CDMA Antenna Requirements updated
		14 Packing System updated
		16 Conformity Assessment Issues (Problèmes d'évaluation de
		conformité) updated